





MOTOPLASTIC, S.A.

Moll de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv - info@puigusa.com

[www.puig.tv](http://www.puig.tv) - [www.puigusa.com](http://www.puigusa.com)

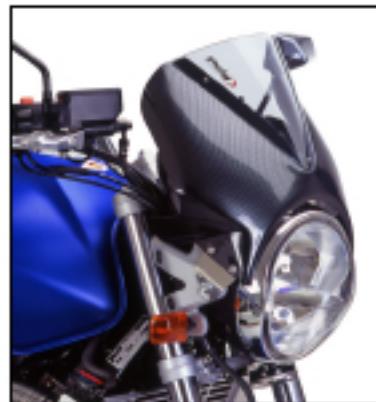

Se sirven 2 unidades de adhesivo microporoso de 30x30x7, para interponer entre el carenado y los relieves de la moto, si ello fuera necesario.

Delivered 2 units of soft sticker 30x30x7 to insert between the screen and the bike panel, if it was necessary.

COLORES DISPONIBLES CARENADO: Carbono, negro.

COLORES DISPONIBLES CÓPULA: Ahumado claro, ahumado oscuro, azul, negro, rojo, amarillo, naranja, verde, transparente, carbono.



AVAILABLE COLOURS FAIRING: Carbon, black.

AVAILABLE COLOURS SCREEN: Smoked clear, dark smoke, blue, black, red, yellow, orange, green, transparent carbon.

ID.	DESCRIPCIÓN	DESCRIPTION	QTY.
1	Carenado	Fairing	1
2	Cópula	Screen	1
3	Tornillo M6x20 DIN 933	M6x20 screw DIN 933	2
4	Silenc.-tornillo M5x16 ISO 7380 y arandela	Well nut-screw ISO 7380 M5x16 and washer	3
5	Soportes metálicos (lado derecho e izqu.)	Metal support (right and Left-sided.)	2
6	Tornillo M6x8 ISO 7380	M6x8 screw ISO 7380	4
7	Tornillo M6x12 ISO 7380 c/tuerca grafiada	M6x12 screw ISO 7380 w/special nut	2
8	Arandela de plástico Ø6,1xØ11x1	Plastic washer Ø6,1xØ11x1	4
9	Tuerca M8 DIN 934	M8 nut DIN 934	2
10	Tornillo M8x35 DIN 933	M8x35 screw DIN 933	2
11	Arandela plana Ø18xØ8x1,5	Ø18xØ8x1,5 flat washer	2
12	Casquillo Ø15xØ8x9	Arrowhead Ø15xØ8x9	2
13	Casquillo Ø12xØ6x8,5	Arrowhead Ø12xØ6x8,5	2
14	Ribete	Trim	1

## INSTRUCCIONES DE MONTAJE CARENABRÍS WINDSHIELD MOUNTING INSTRUCTIONS

Mod.: VISION

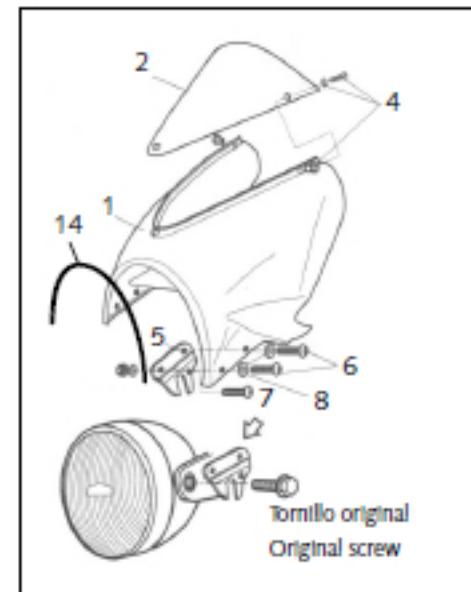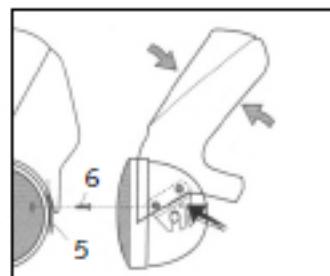

## SISTEMA DEL MONTAJE PARA - MOUNTING SYSTEM: HONDA CB600F '03 - CB900F HORNET

