
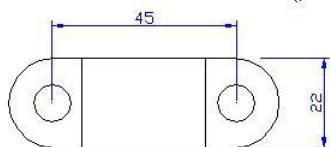
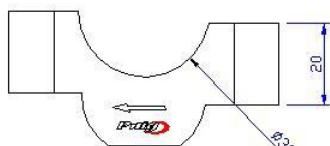
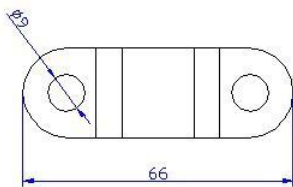


BMW R1200 / 1200GS '04-'18 / R1200GS ADVENTURE '06-'18 /
R1200GS EXCLUSIVE '17-'18 / R1200GS RALLY '17-'18 /
R1250GS '18-'20 / R1250GS ADVENTURE '18-'20 / R1250GS HP '18-'20




REF 20308P
REF 20309P

TORRETA Ø32 / Ø32 RISER


Apretar primero el tornillo 1 completamente y después el tornillo 2.
First tighten the screw 1 completely and then tighten the screw 2.

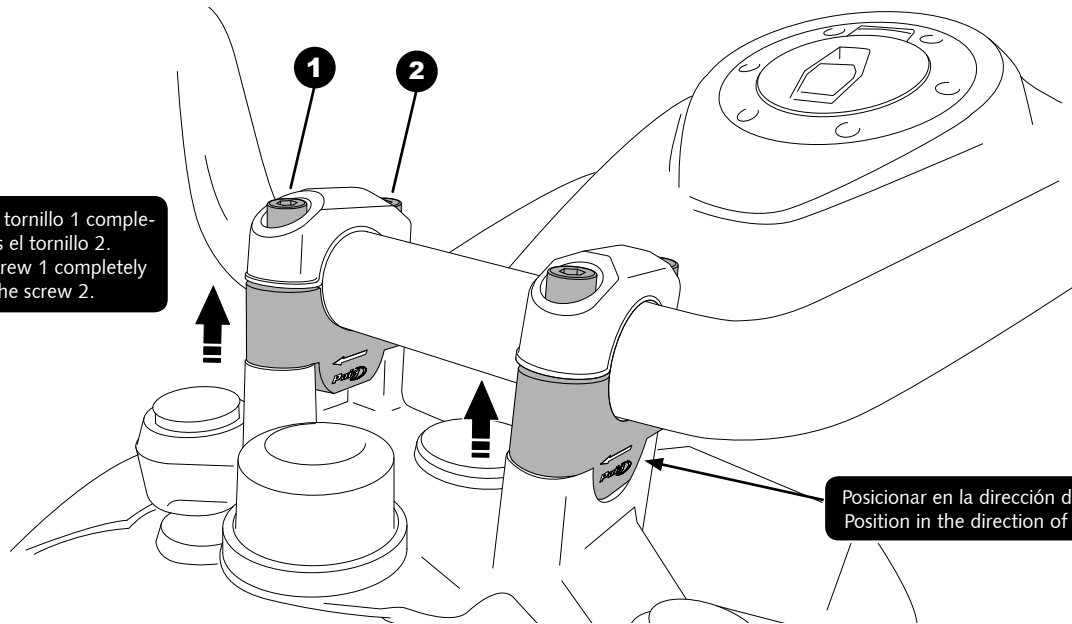

Ref. 20308P

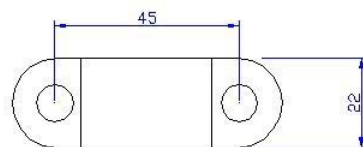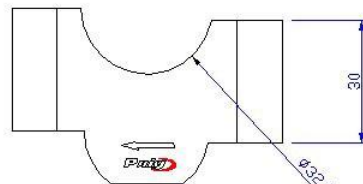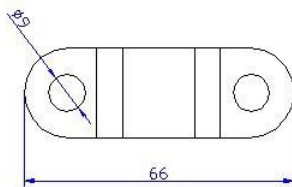

Ref. 20309P

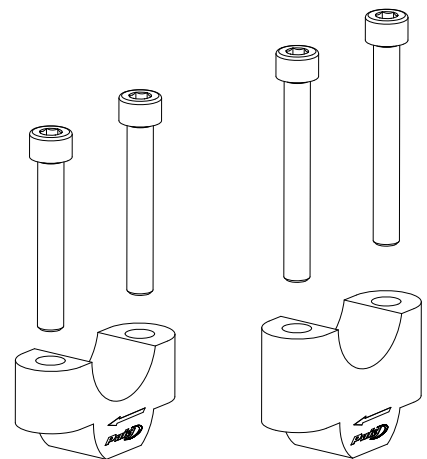

Ref. 20308P

Ref. 20309P

REF:	TORNILLERÍA	SCREWS	QTY.
20308P	Tornillos M8x55	M8x55 screws	4
20309P	Tornillos M8x65	M8x65 screws	4