

# BMW F900R '20-

## M O U N T I N G I N S T R U C T I O N S







REF 20359

WINDSHIELD NG SPORT (OEM SUPPORT)

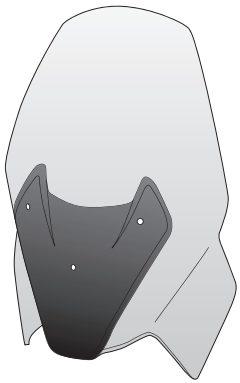

WITH ORIGINAL BMW SUPPORT




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula SPORT	SPORT screen	1	10775W/H/F/N
2		Tornillo especial M5X15 long. hexagonal 14	M5x15 special screw hexagonal lenght 14	3	TORNI-EM5---513
3		Silentblock Ø9XØ6X8mm	Ø9XØ6X8mm silentblock	3	AROPASACABLES-3
4		Casquillo con valona Ø12XØ6,8X7,3	Ø12XØ6,8X7,3 bush with blange	3	CASQUI-1A---750
5		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	3	TORNI-I7380-493
6		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Allen cap screw	3	TAPON-----85

# BMW F900R '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

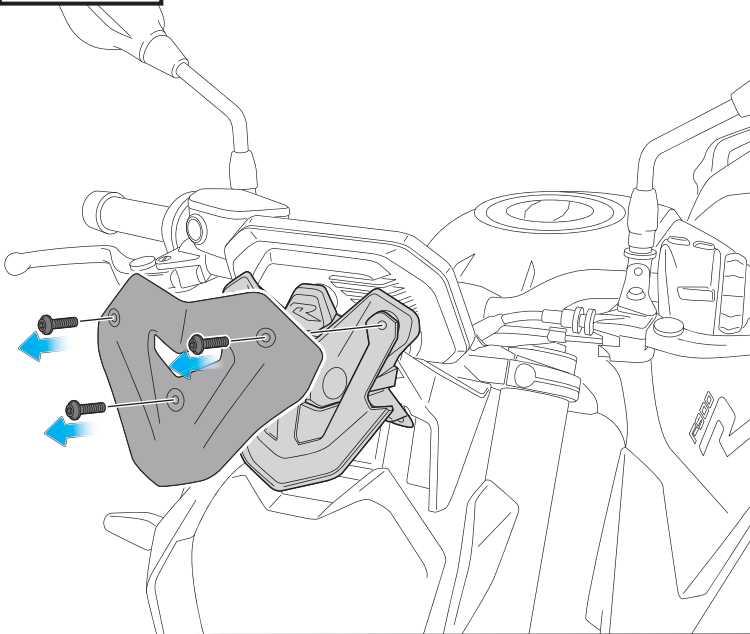


**2**

**ASSEMBLY  
MONTAJE**

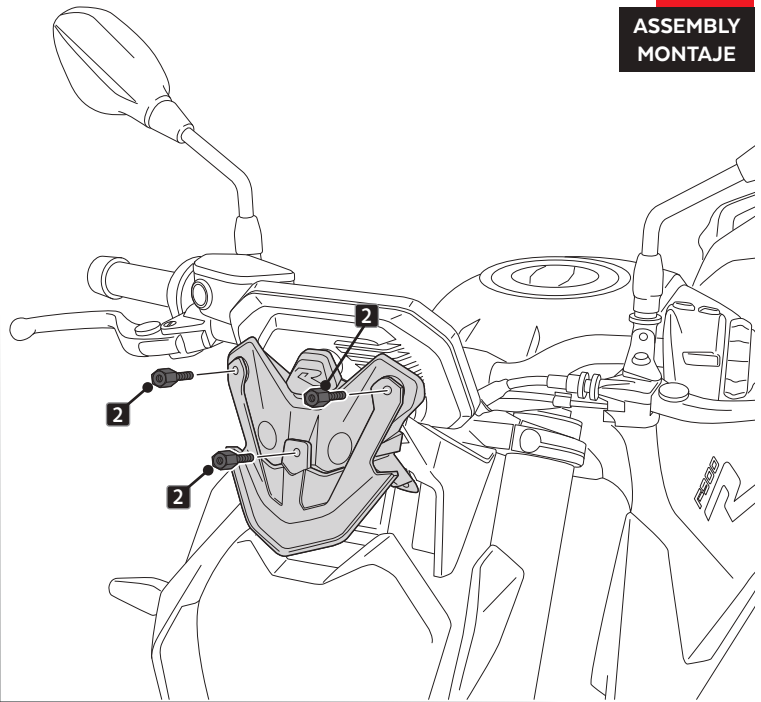

**3**

**ASSEMBLY  
MONTAJE**

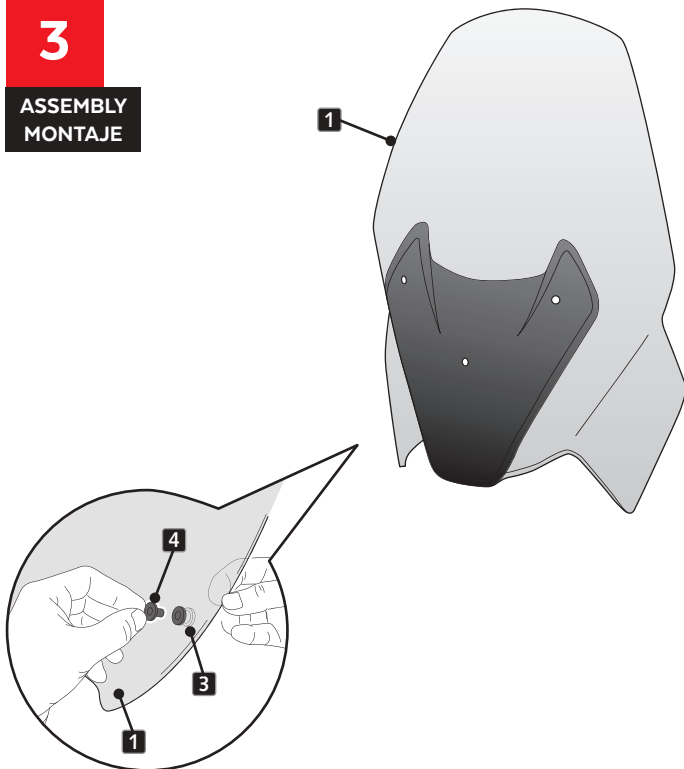

**4**

**ASSEMBLY  
MONTAJE**

