

# YAMAHA MT09 '21-

## M O U N T I N G I N S T R U C T I O N S

REF 20644

CARENABRÍS NG SPORT / WINDSHIELD NG SPORT



1 Person



15 min











EASY



ALLEN

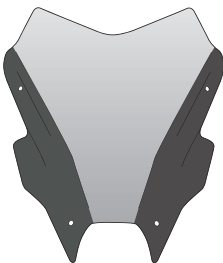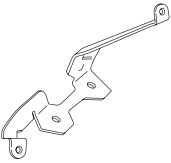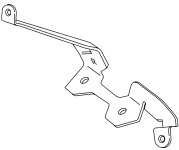Nº 3  
Nº 4  
Nº 5




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Sport	Sport screen	1	20644F/H/W/ N/R/CM3
2		Soporte Izquierdo	Left support	1	SOPOR2P3-L20644
3		Soporte derecho	Right support	1	SOPOR2P3-R20644
4		Tornillo Allen M6x16 Ø14 ISO 7380	M6x16 Ø14 ISO 7380 Allen screw	4	TORNI-I7380-403
5		Silentblock Ø9 xØ6 x8mm	Ø9 xØ6 x8mm Silentblock	4	AROPASACABLES-3
6		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
7		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
8		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

# YAMAHA MT09 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

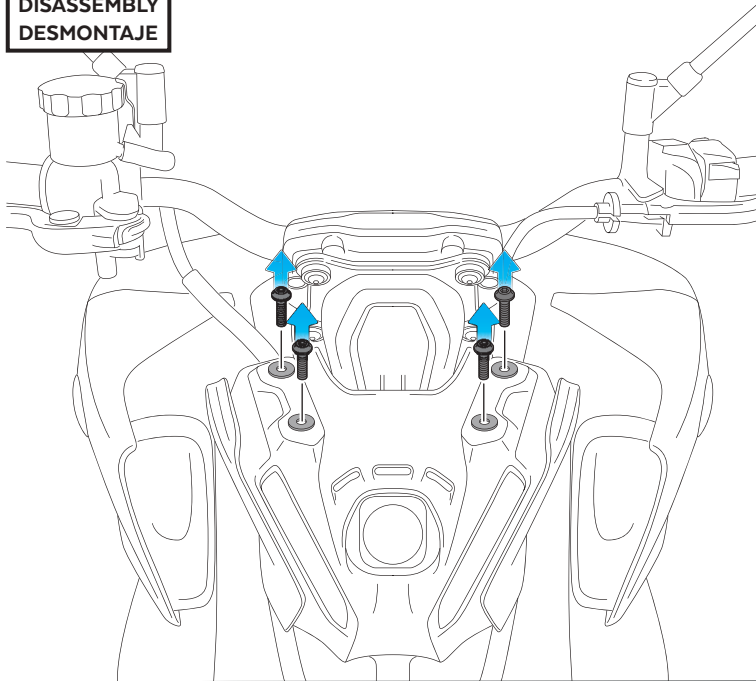



**2**

**ASSEMBLY  
MONTAJE**

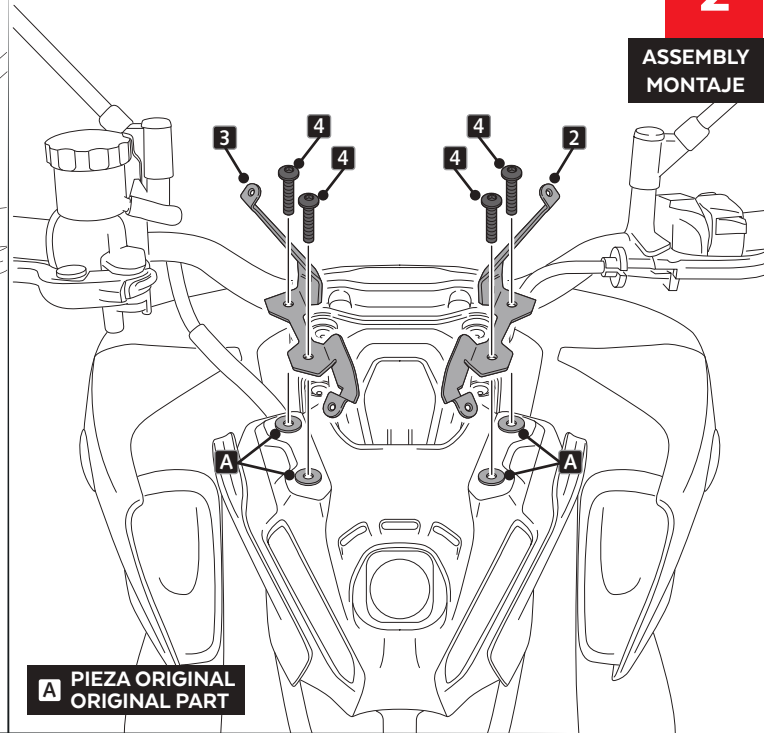

**3**

**ASSEMBLY  
MONTAJE**

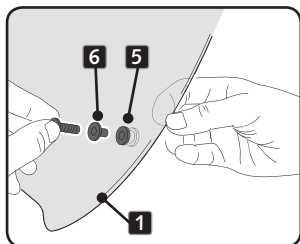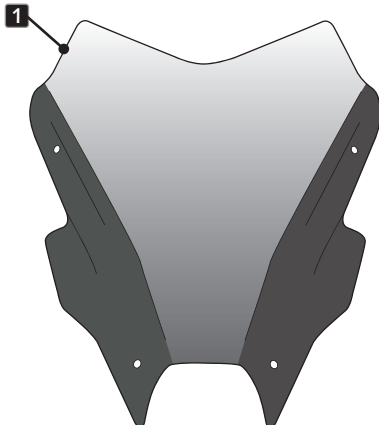

**7** Par de apriete - 1,8 Nm  
Tightening torque - 1,8Nm

**4**

**ASSEMBLY  
MONTAJE**

