

KAWASAKI Z650 '20-

M O U N T I N G I N S T R U C T I O N S

REF 21134

DOWNFORCE NAKED FRONTAL SPOILER



1 Person



20 min



EASY



FIX



Nº 13

ALLEN



Nº 3
Nº 6


ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Aleron frontal naked	Frontal naked spoiler	1	21134J/C M3
2		Soporte izquierdo	Left support	1	SOPOR2P2-L21134
3		Soporte derecho	Right support	1	SOPOR2P2-R21134
4		Silentblock Ø12xØ6x9	Ø12xØ6x9 silentblock	2	AROPASACABLES-1
5		Arandela M6 DIN125	M6 DIN125 washer	2	ARANDEPD125-054
6		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 Allen screw	2	TORNI-AI---520
7		Tope de goma Ø3,7-3,8 x 3,2mm	Ø3,7-3,8 x 3,2mm bumper foot	2	TOPE--POF-40022
8		Tornillo M8x40 DIN931	M8x40 DIN931 screw	2	TORNI-D931---99
9		Arandela M8 DIN125	M8 DIN125 washer	2	ARANDEPD125-018

KAWASAKI Z650 '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

1


**DISASSEMBLY
DESMONTAJE**

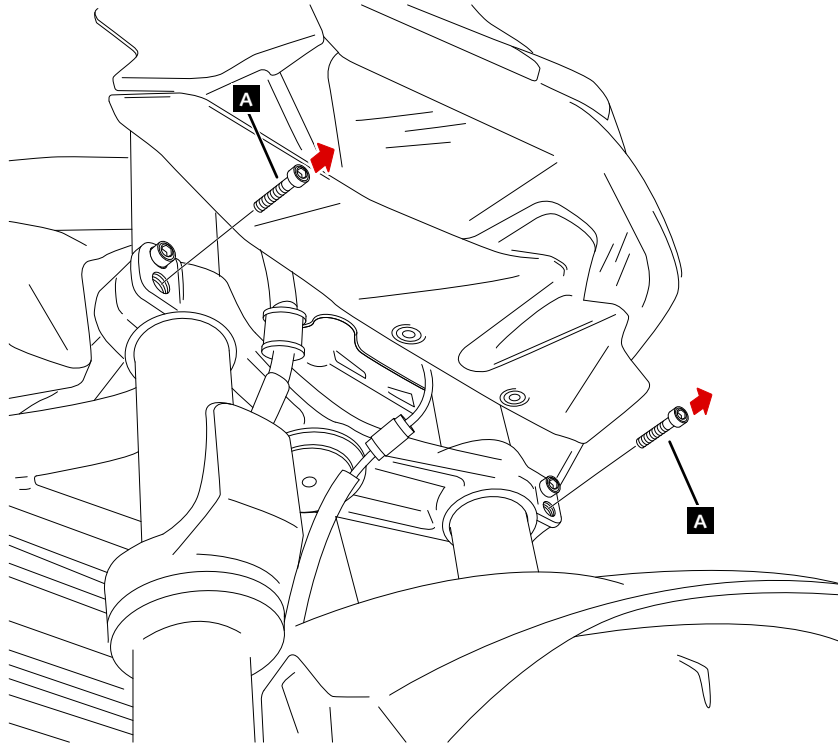


A Tornillería original
Original screws

2

**ASSEMBLY
MONTAJE**

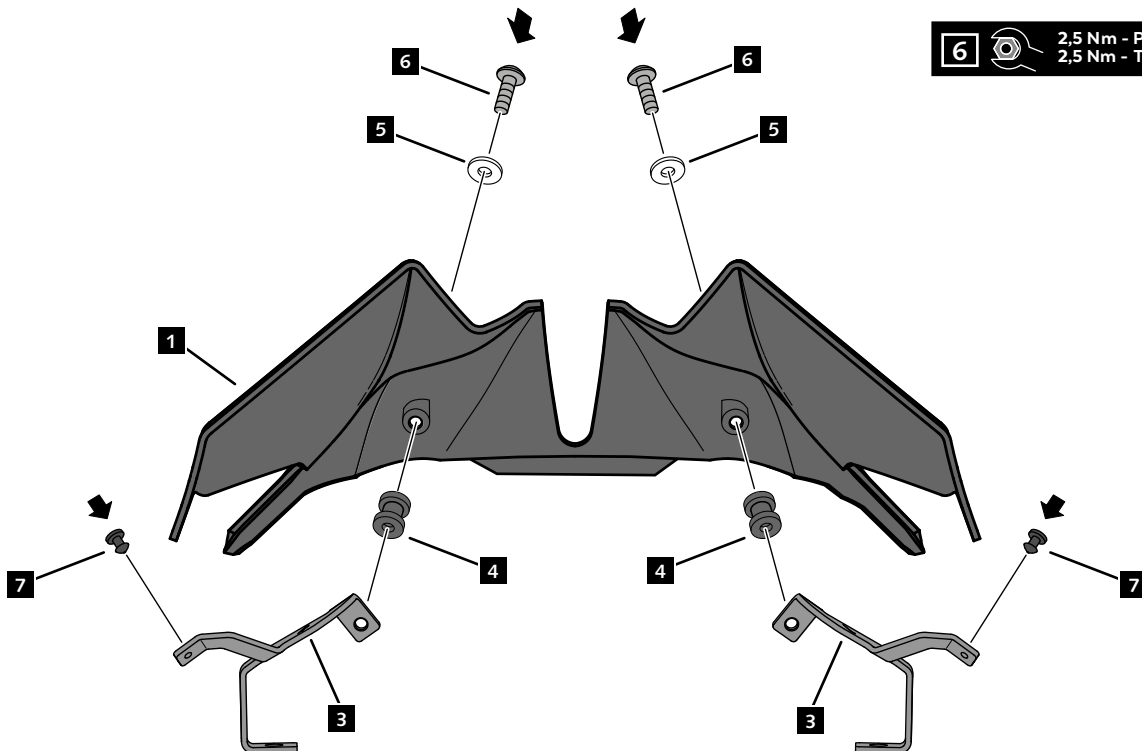


6  2,5 Nm - Par de apriete
2,5 Nm - Tightening torque

KAWASAKI Z650 '20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

3

ASSEMBLY
MONTAJE

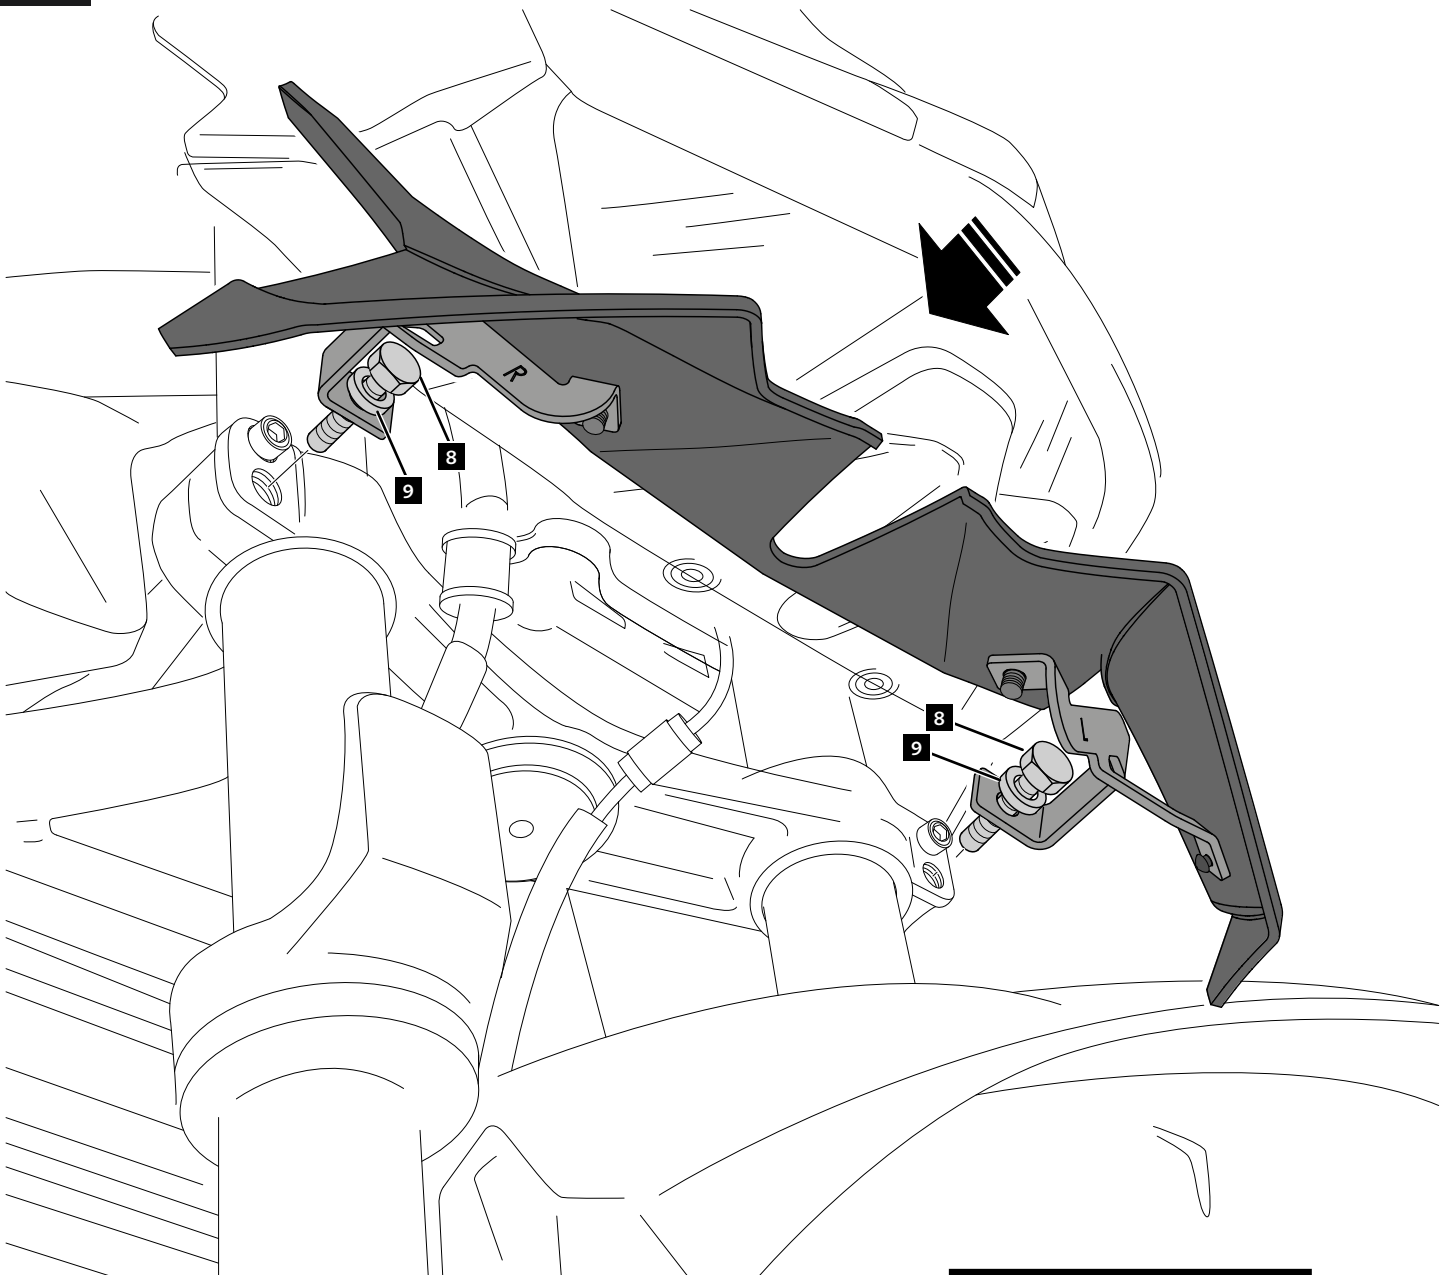

8



18 Nm - Par de apriete
18 Nm - Tightening torque