

GAS GAS SM700'22-


M O U N T I N G I N S T R U C T I O N S



REF 21474

WINDSHIELD NG SPORT



Ø 6mm
Ø 11mm



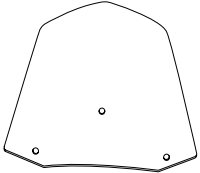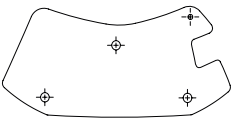
ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula sport	Sport screen	1	21474F/H/W/NM3
2		Plantilla	Template	1	PLANTILLA-21474
3		Silentblock Ø18xØ9xØ11 x8	Ø18xØ9xØ11x8 silentblock	6	SILENBGONE--064
4		Casquillo con valona Ø15xØ9x7,5	Ø15xØ9x7,5 Bush with flange	3	CASQUI-1A---324
5		Casquillo con valona M5	M5 Bush with flange	3	CASQUI-----517
6		Arandela metálica M6 DIN9021 Ø18xØ6,5x1,6	M6 DIN9021 Ø18xØ6,5x1,6 metallic washer	1	ARANDPD9021-037
7		Casquillo nylon Ø9,5xØ14,3x12,7 mm	Ø9,5xØ14,3x12,7 mm nylon arrowhead	1	DISTANCIADOR---
8		Tornillo M5x35 DIN7991	M5x35 DIN7991 screw	1	TORNIA535--293
9		Arandela cónica de plástico Ø20xØ6x5mm	Ø20xØ6x5mm Plastic conical washer	3	ARANDENND20-030
10		Tornillo M5x16 DIN7991	M5x16 DIN7991 screw	2	TORNI-D7991-867
11		Tapón tornillo M5 DIN7991	M5 DIN7991 screw cap	3	TAPON-----92
12		Brida cables	Cable ties	1	ABR-00101100539

GAS GAS SM700'22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

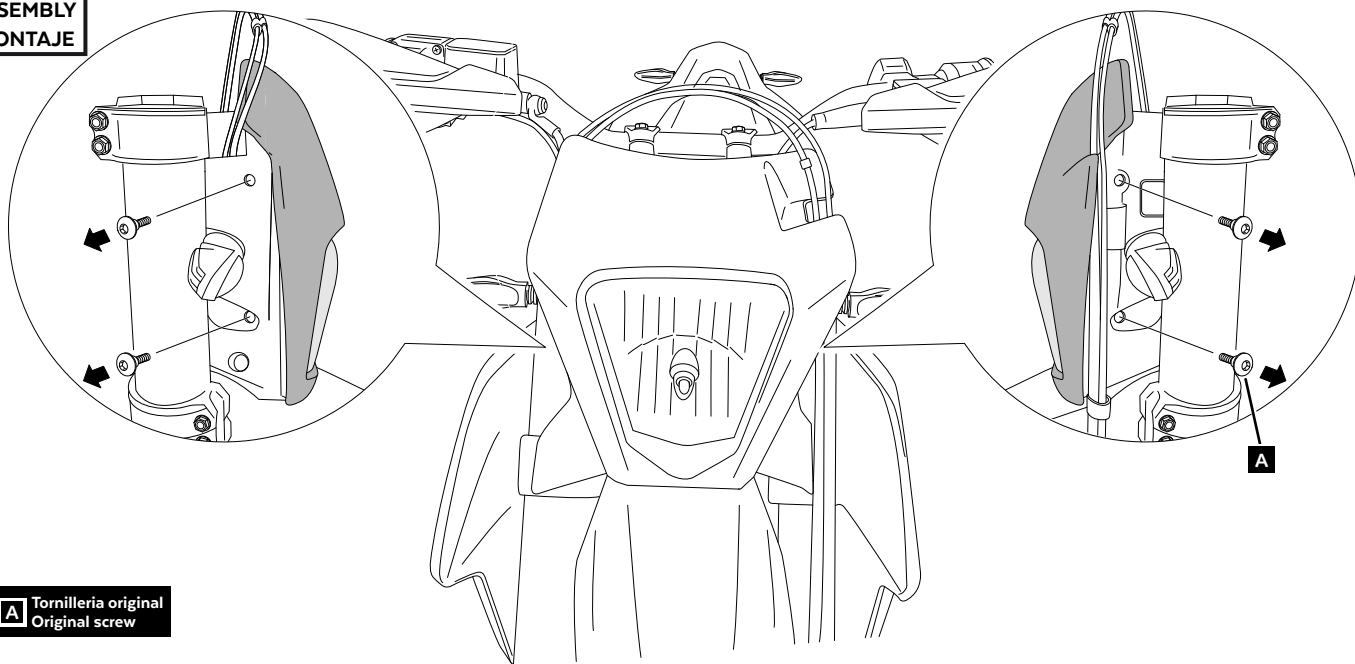

2


DISASSEMBLY
DESMONTAJE

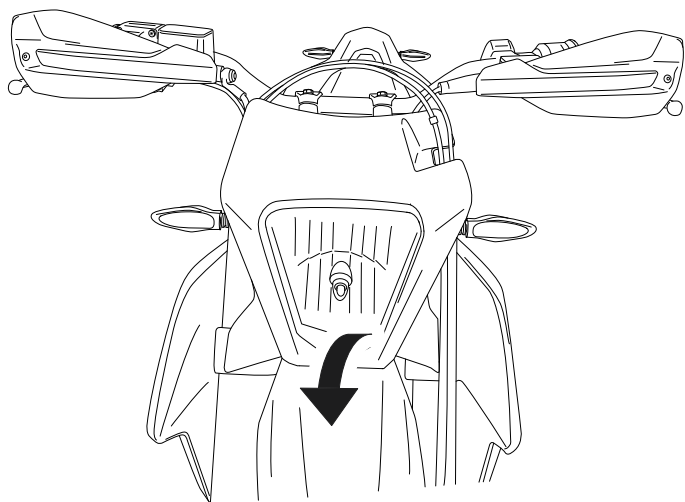

A DISCONNECT THE HEADLIGHT

3

ASSEMBLY
MONTAJE

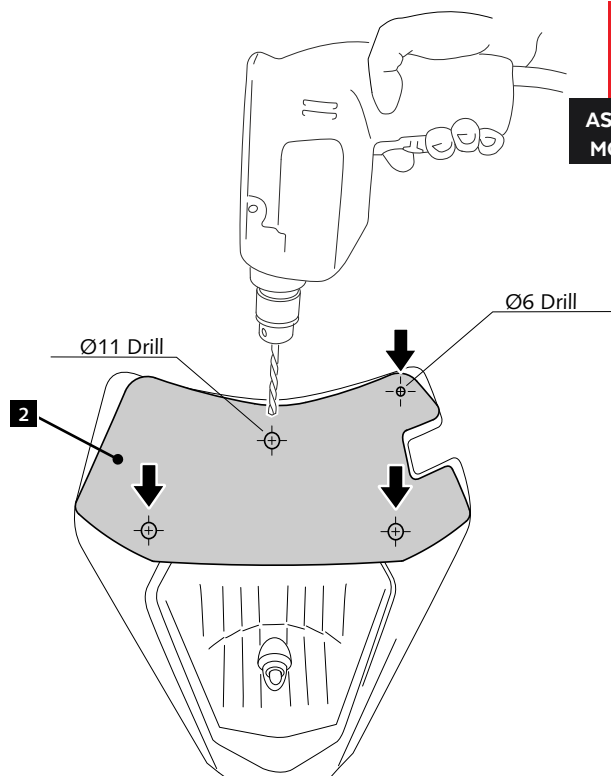


GAS GAS SM700'22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

4


ASSEMBLY
MONTAJE

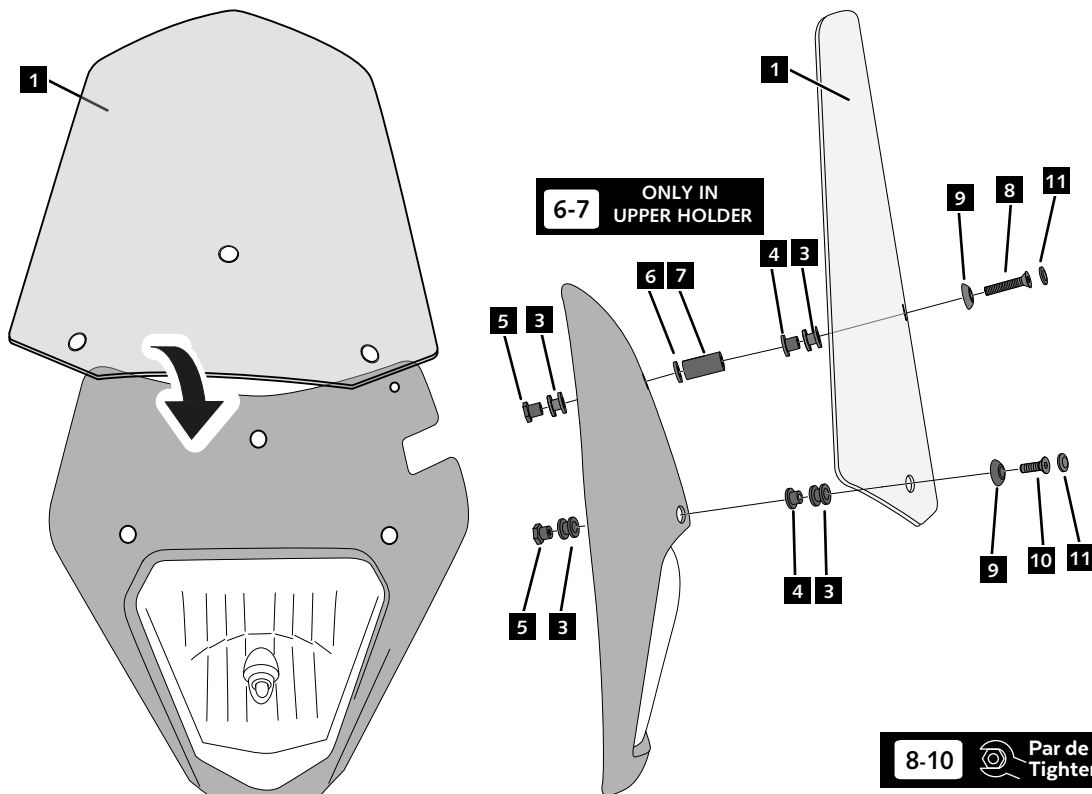


5

ASSEMBLY
MONTAJE

A Tornilleria original
Original screw

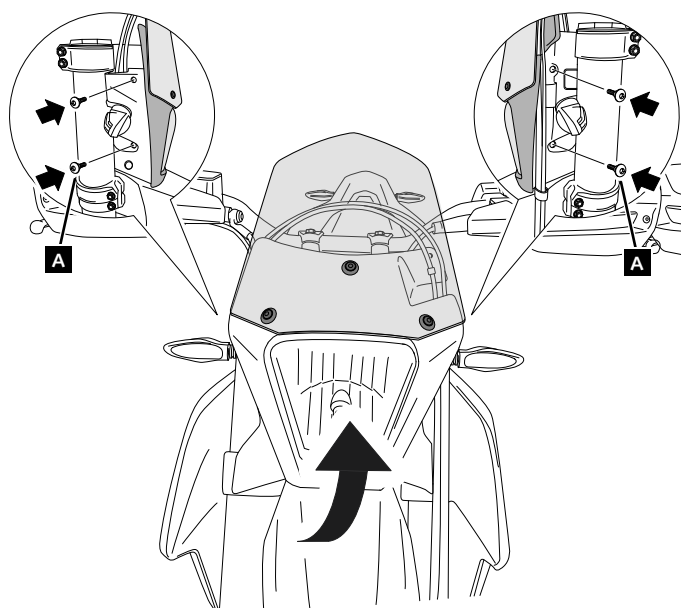

A CONNECT THE HEADLIGHT

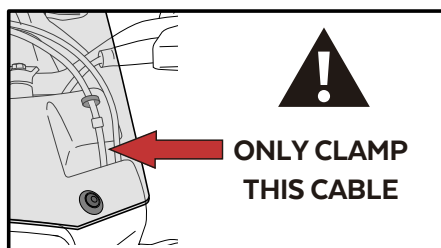

6

ASSEMBLY
MONTAJE

