












# SCUTUM SILENCE S01
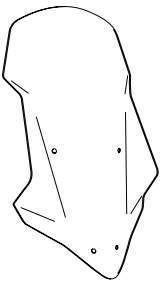
## M O U N T I N G I N S T R U C T I O N S

REF 21488

V-TECH LINE TOURING




ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula	Windshield	1	21488HM3
2		Soporte izquierdo	Left support	1	SOPOR-2P-5--S01
3		Soporte derecho	Right support	1	SOPOR-2P-5--S01
4		Casquillo con valona Ø16x Ø10x Ø6x 17mm	Ø16x Ø10x Ø6x 17mm bush with flange	4	CASQUISCUTUMS01
5		Tornillo Allen M6x30 Ø11 ISO 7380	M6x30 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-626
6		Tornillo allen M6x25 Ø14 ISO 7380	M6x25 Ø14 ISO 7380 Allen screw	2	TORNI-I7380-405
7		Silentblock M5	M5 silentblock	4	SILENTBTM5-046/1
8		Tornillo allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 allen screw	4	TORNI-I7380-493
9		Arandela de nylon M5x1	M5 nylon washer	4	ARNV00000000245
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

# SCUTUM SILENCE S01

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

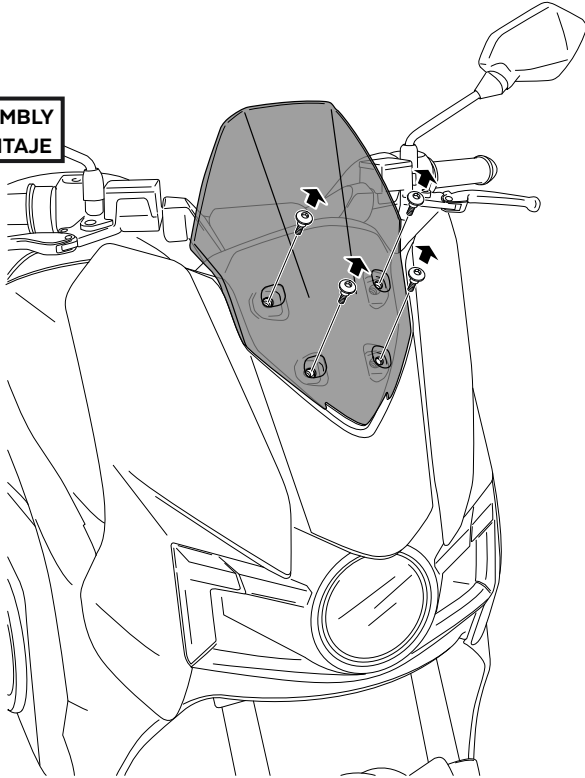


**2**

ASSEMBLY  
MONTAJE

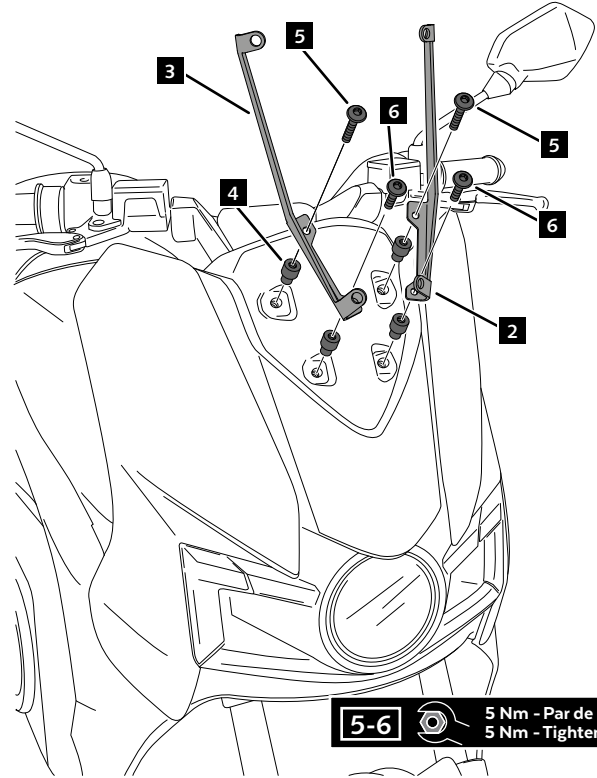

**3**

ASSEMBLY  
MONTAJE

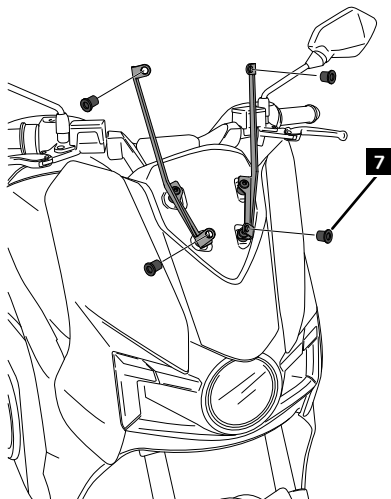

**8**

2,5Nm - Par de apriete  
2,5 Nm - Tightening torque

**4**

ASSEMBLY  
MONTAJE

