

# HD SPORSTER RH1250 S' 22-

## M O U N T I N G I N S T R U C T I O N S

REF 21581

**SEMIFAIRING FURY TOURING MODEL  
BLACK**

REF 21588

**SEMIFAIRING FURY TOURING MODEL  
MATT BLACK**



ALLEN  
Nº 3

TORX  
T45


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Semicarenado	Semifairing	1	10947N/JM3
2		Cúpula touring	Touring screen	1	10949W/H/F/NM3
3		Soporte metálico derecho ( R )	Right metal support ( R )	1	SOPOR2P4-R21325
4		Soporte metálico izquierdo ( L )	Left metal support ( L )	1	SOPOR2P4-L21325
5		Casquillo Ø13xØ8,5 x15	Ø13xØ8,5 x15 Arrowhead	4	CASQUI-M---614
6		Tornillo M8x45 DIN912 ( TX45 )	M8x45 DIN912 (TX45) screw	4	TORNI-D912--906
7		Silentblock M5	M5 silentblock	2	SILENTBTM5-046/1
8		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	3	ARAND-EPDM--722
9		Tuerca autoblocante M5 DIN982	M5 DIN982 Lock nut	1	TUERCA-D982-746
10		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	2	AROPASACABLES-3
11		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	2	CASQUI-1A---750
12		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	3	TORNI-I7380-493
13		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNIAI7380-387
14		Arandela de nylon M5	M5 nylon washer	4	ARNV00000000245
15		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	5	TAPON-----85

# HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

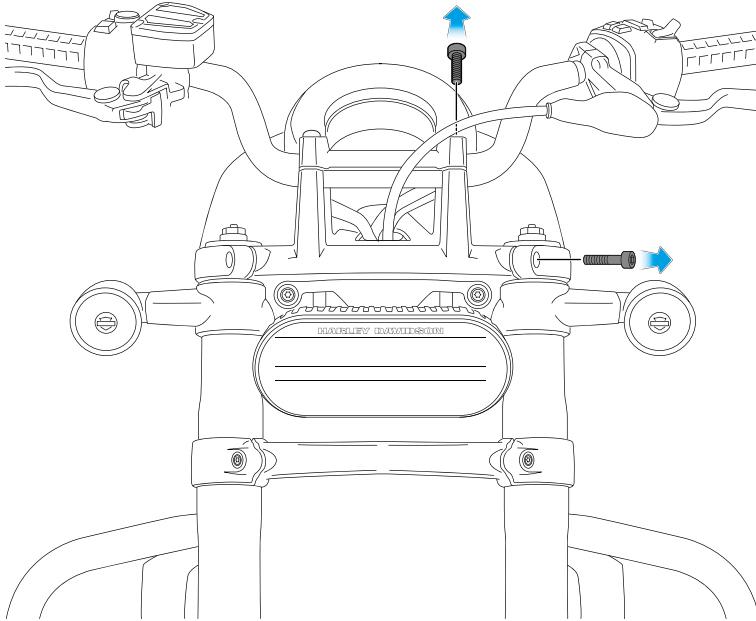


**2**

**ASSEMBLY  
MONTAJE**

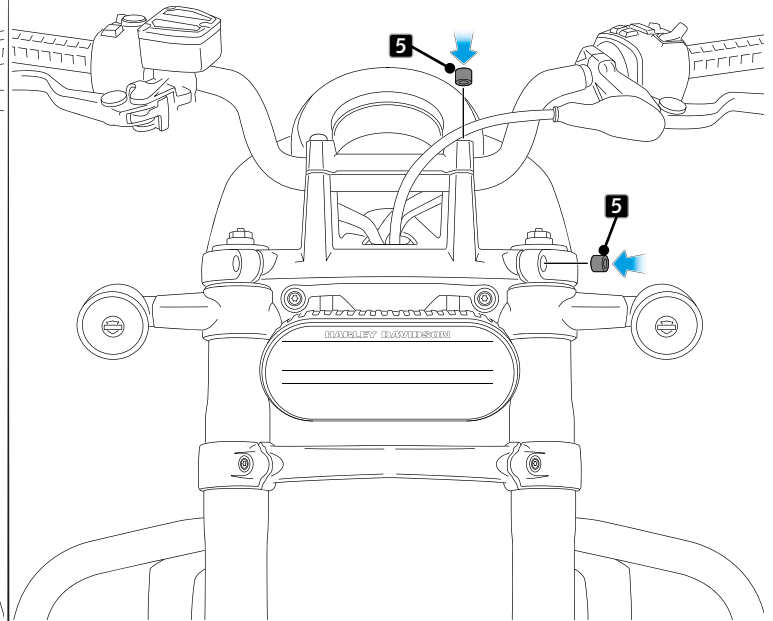

**3**

**ASSEMBLY  
MONTAJE**

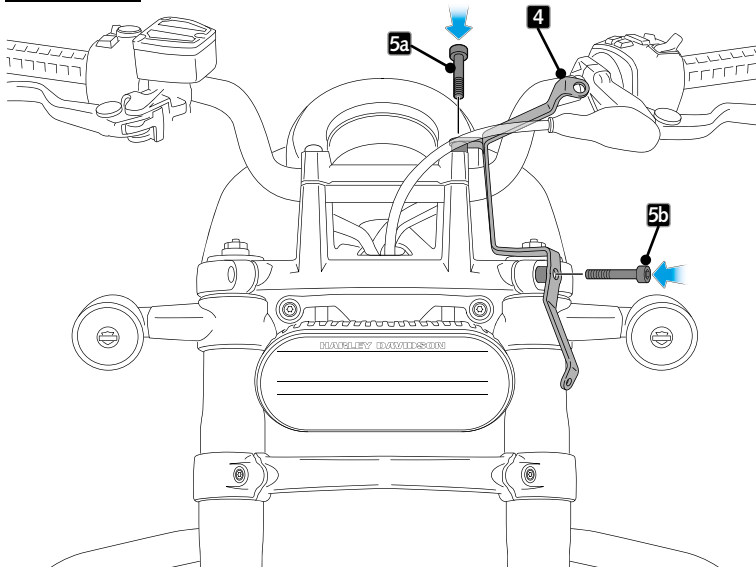


**5a** Par de apriete - 20 Nm  
Tightening torque - 20Nm

**5b** Par de apriete - 28 Nm  
Tightening torque - 28Nm

**4**

**DISASSEMBLY  
DESMONTAJE**

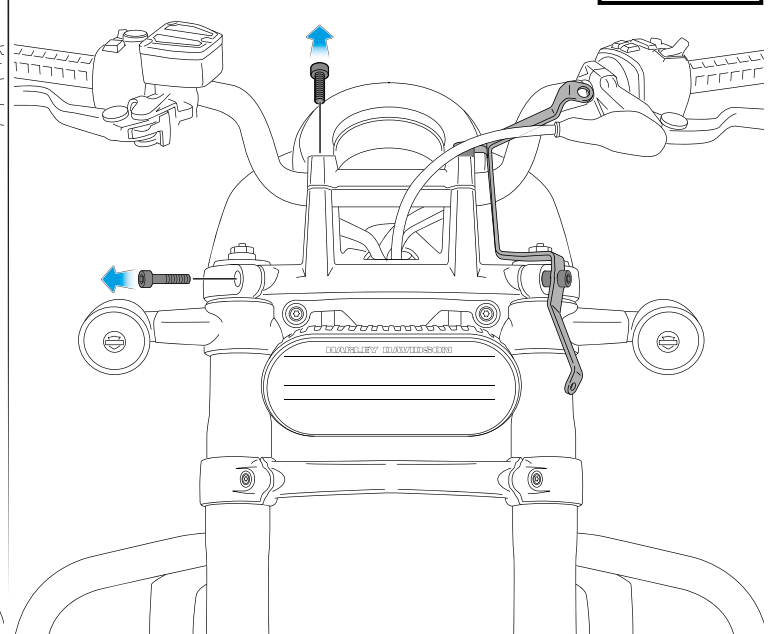


# HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

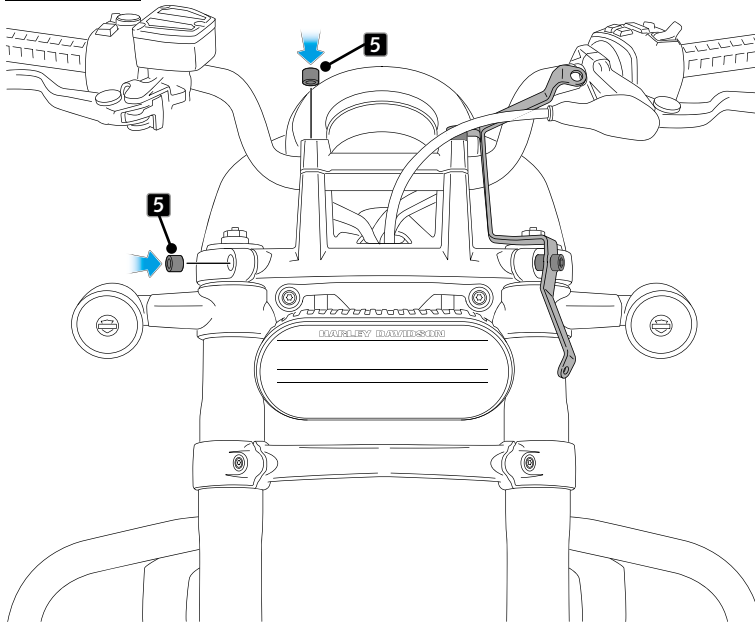

**6**

ASSEMBLY  
MONTAJE

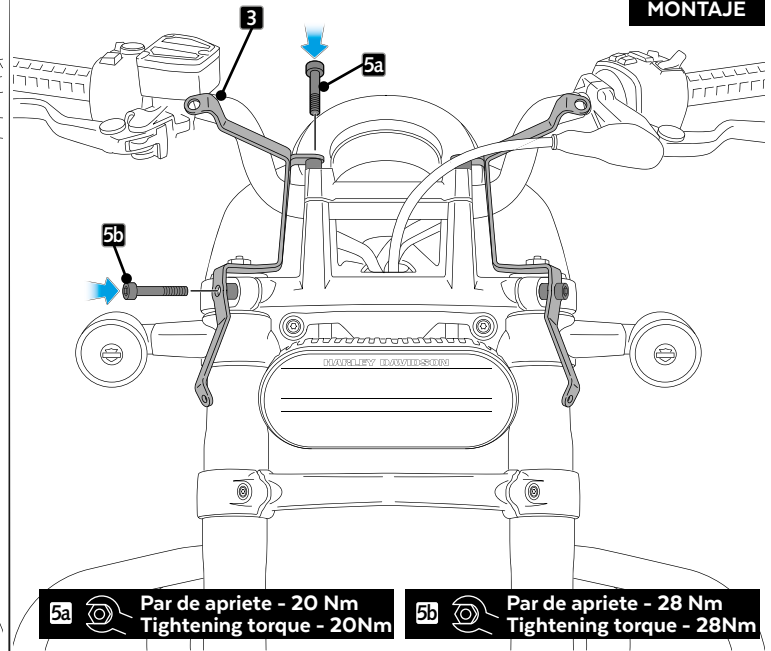


**5a** Par de apriete - 20 Nm  
Tightening torque - 20Nm

**5b** Par de apriete - 28 Nm  
Tightening torque - 28Nm


**7**

ASSEMBLY  
MONTAJE

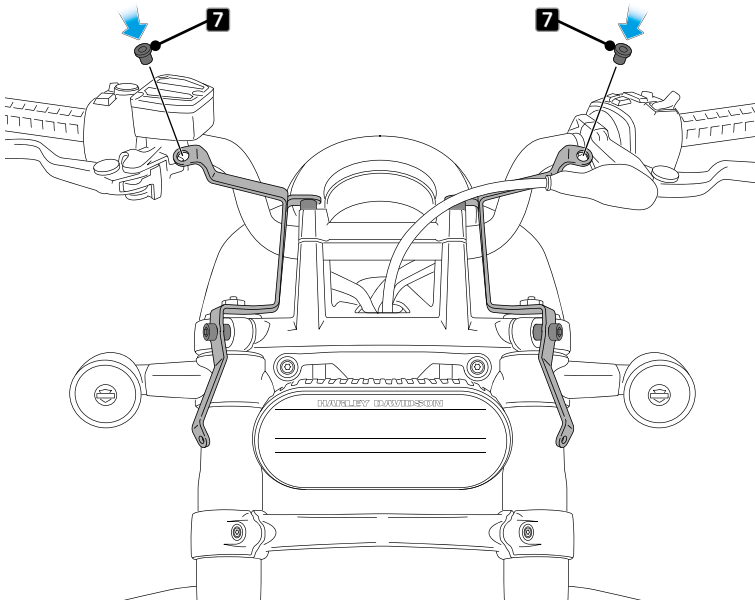

**8**

ASSEMBLY  
MONTAJE

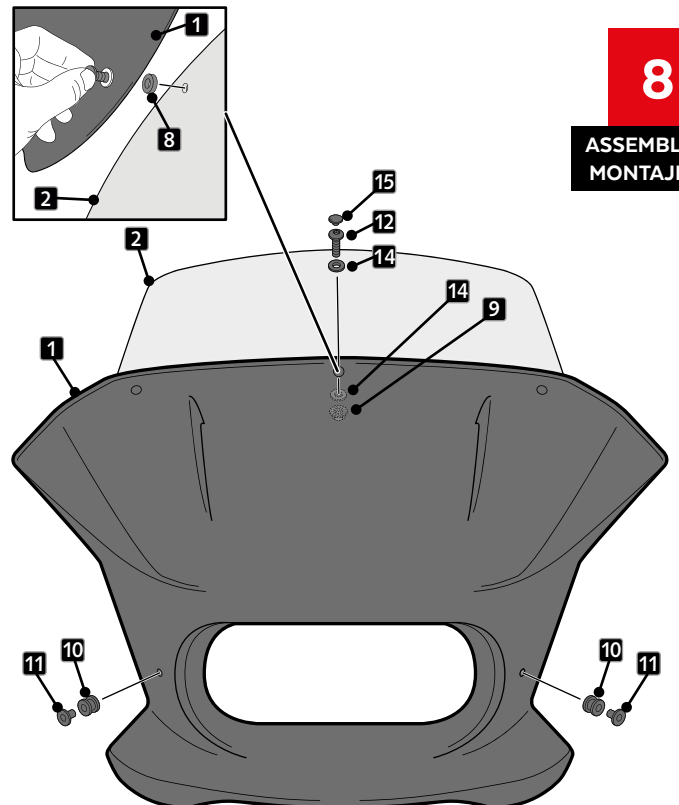


# HD SPORSTER RH1250 S' 22-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**9**

ASSEMBLY  
MONTAJE

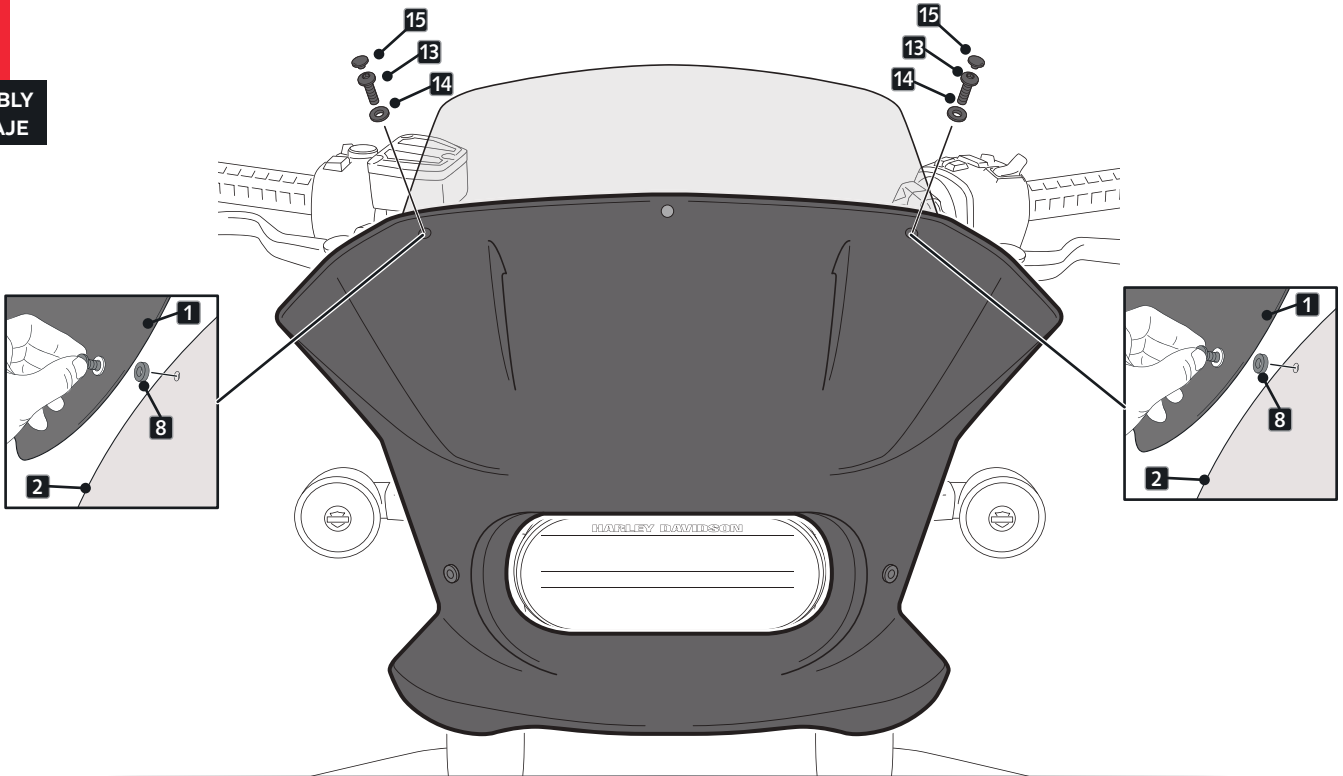

**10**

ASSEMBLY  
MONTAJE

