

CFMOTO 800NK SPORT / 800NK ADVANCED '24-

M O U N T I N G I N S T R U C T I O N S

REF 21867

CARENABRÍS NG SPORT / WINDSHIELD NG SPORT



1 Person



30 min



EASY



ALLEN



N° 3
N° 5


ID.	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Cúpula	Screen	1	10982W/H/F/JM3
2		Soporte central	Central support	1	SOPOR3P3-C21867
3		Soporte izquierdo	Left support	1	SOPOR3P3-L21867
4		Soporte derecho	Right support	1	SOPOR3P3-R21867
5		Tornillo allen M5x8 Ø11 ISO 7380	M5x8 Ø11 ISO 7380 allen screw	4	TORNI-I7380-933
6		Tornillo allen M6x16 DIN912	M6x16 DIN912 screw	2	TORNIAD912I0344
7		Silentblock Ø12xØ6x9	Ø12xØ6x9 silentblock	4	AROPASACABLES-1
8		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 bush with flange	4	CASQUI-1A---750
9		Tornillo allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 allen screw	4	TORNI-AI---520
10		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	4	TAPON-----85

CFMOTO 800NK SPORT / 800NK ADVANCED '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

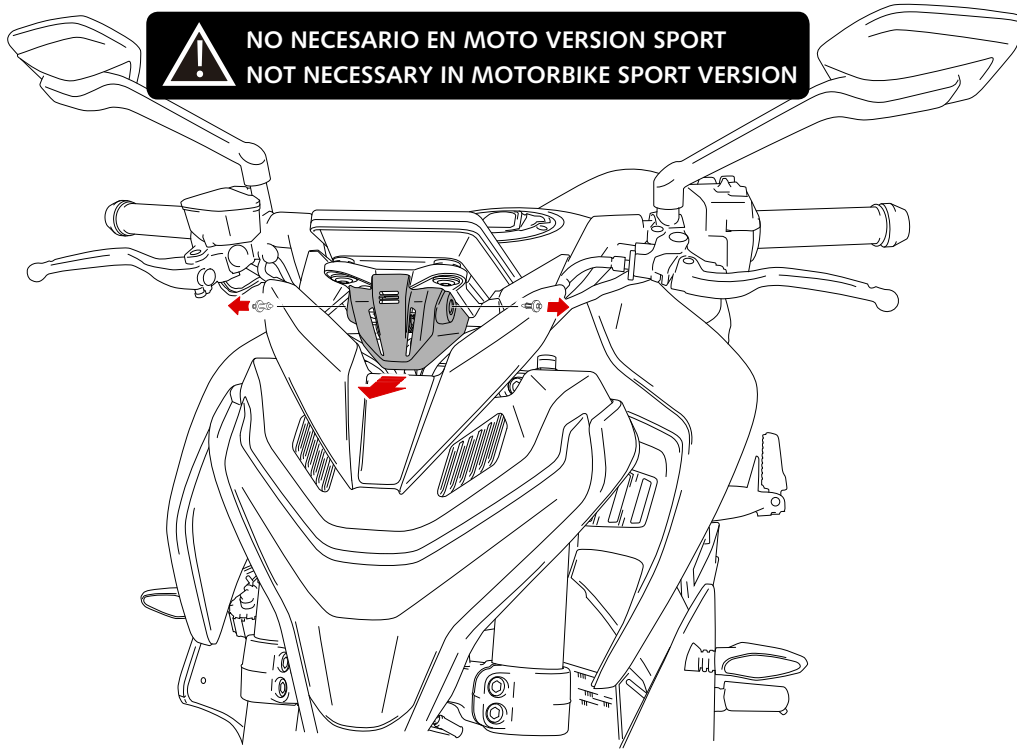

2

DISASSEMBLY
DESMONTAJE

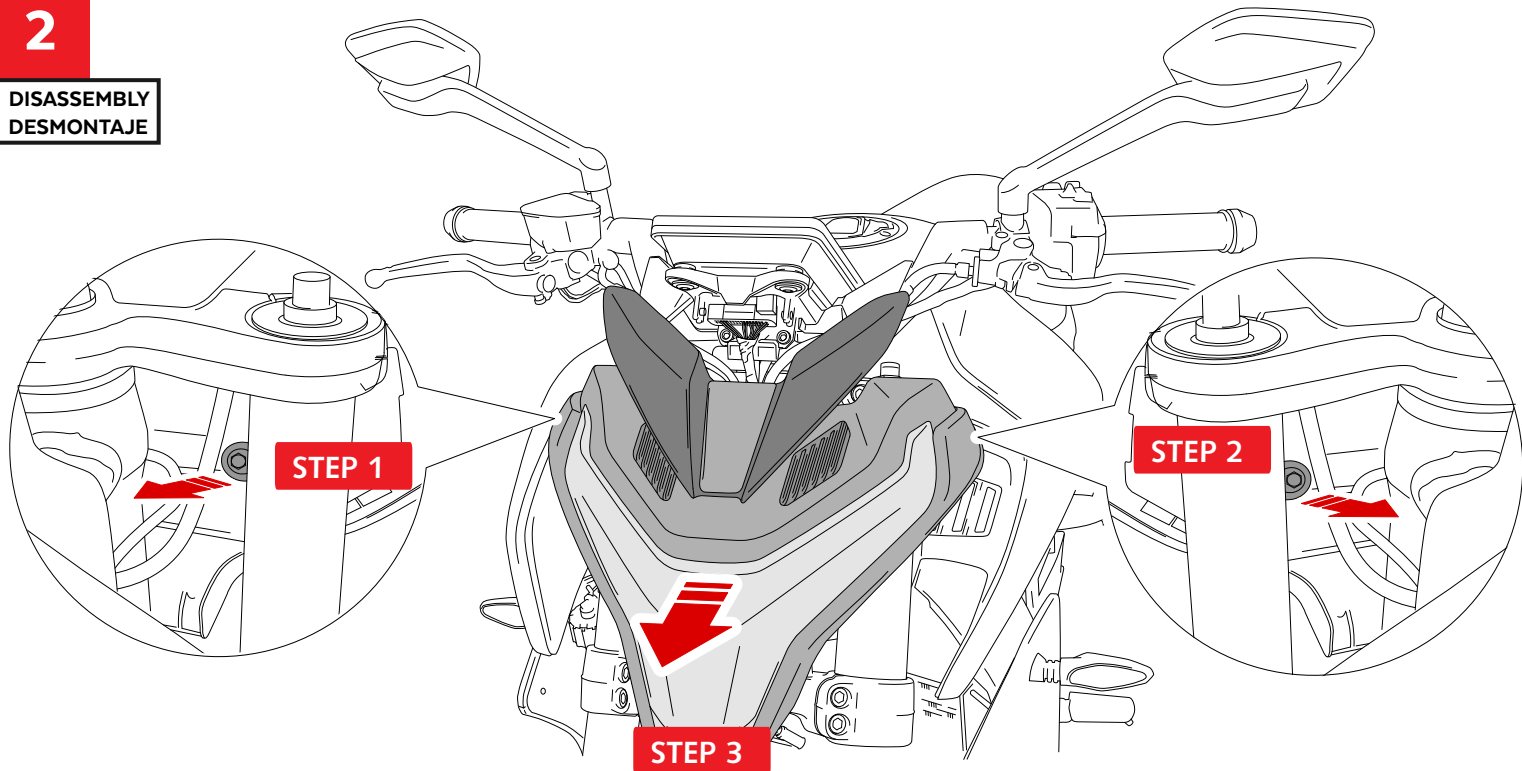


CFMOTO 800NK SPORT / 800NK ADVANCED '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


3

**DISASSEMBLY
DESMONTAJE**

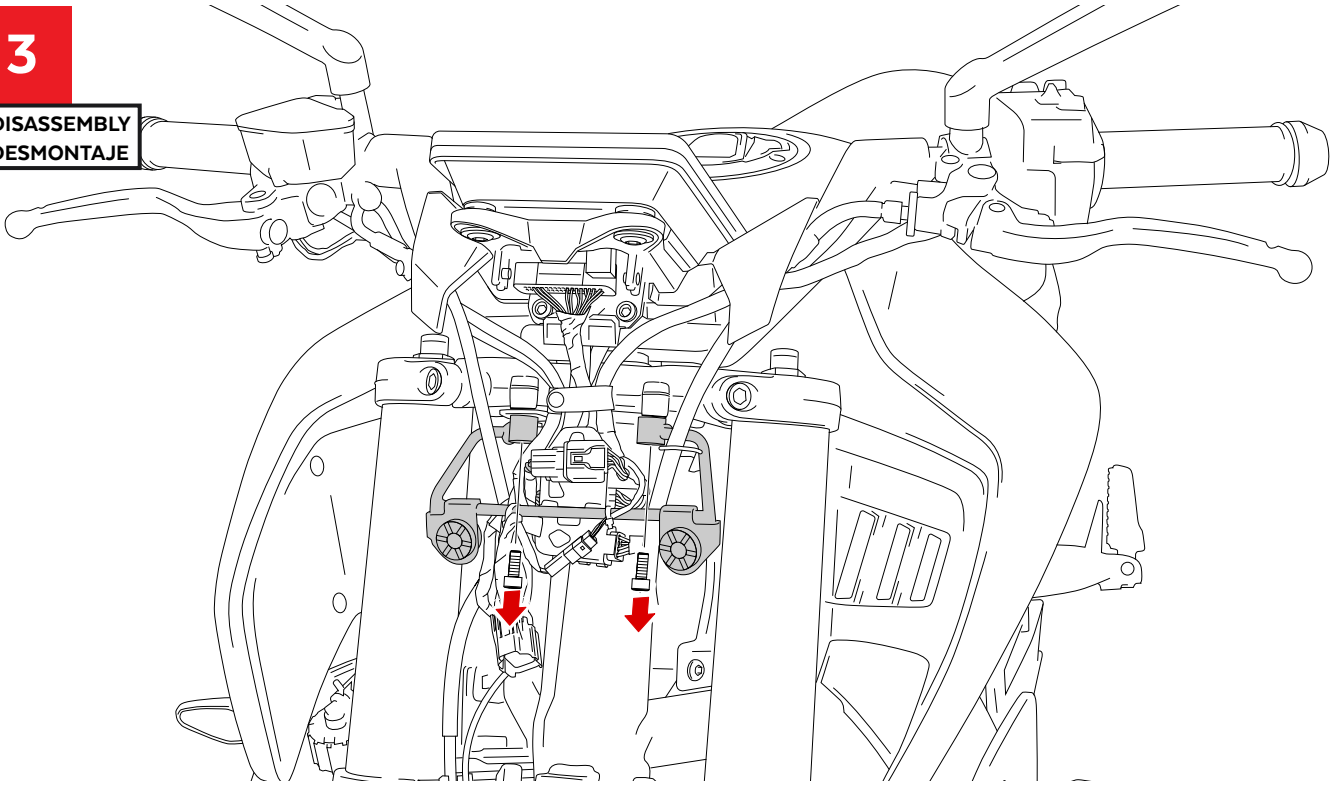

4

**ASSEMBLY
MONTAJE**

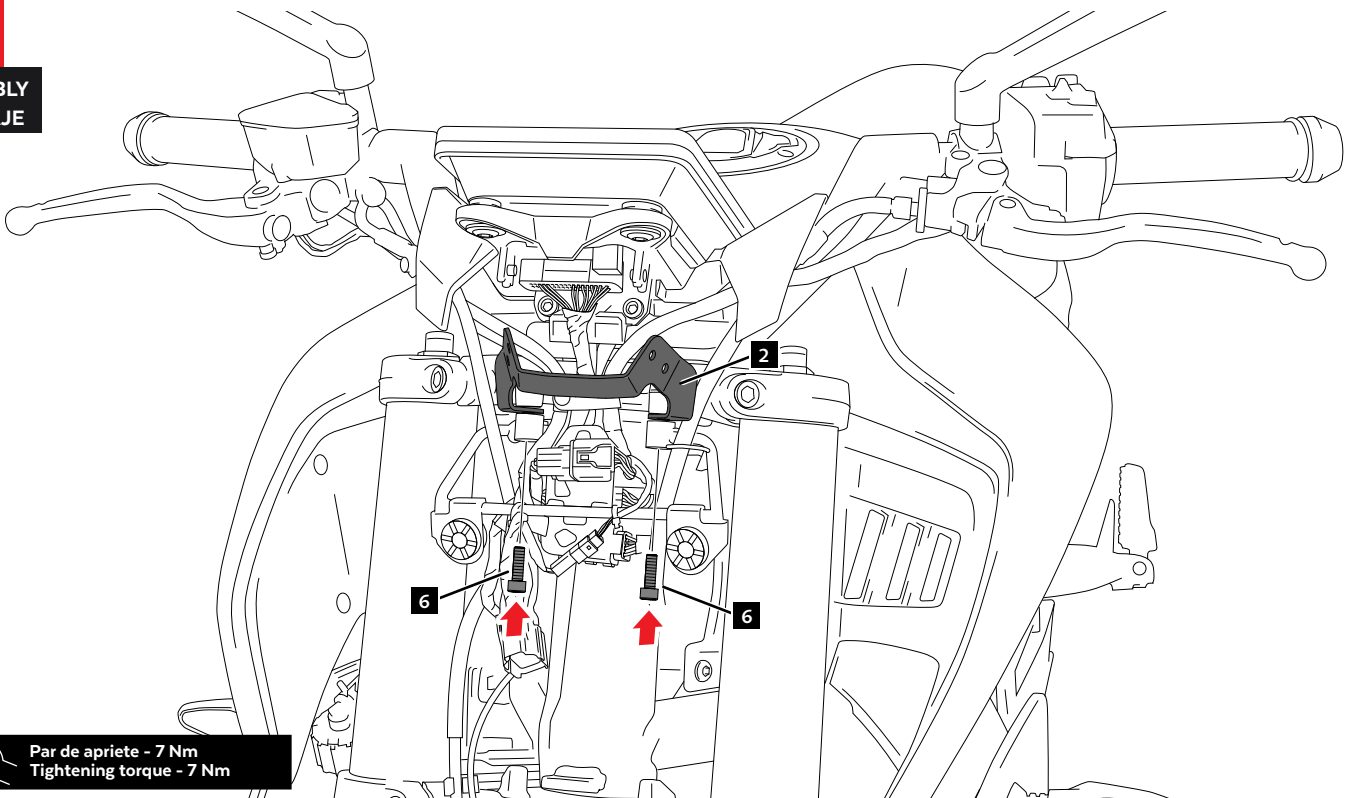

6




Par de apriete - 7 Nm
Tightening torque - 7 Nm

CFMOTO 800NK SPORT / 800NK ADVANCED '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


5

ASSEMBLY
MONTAJE

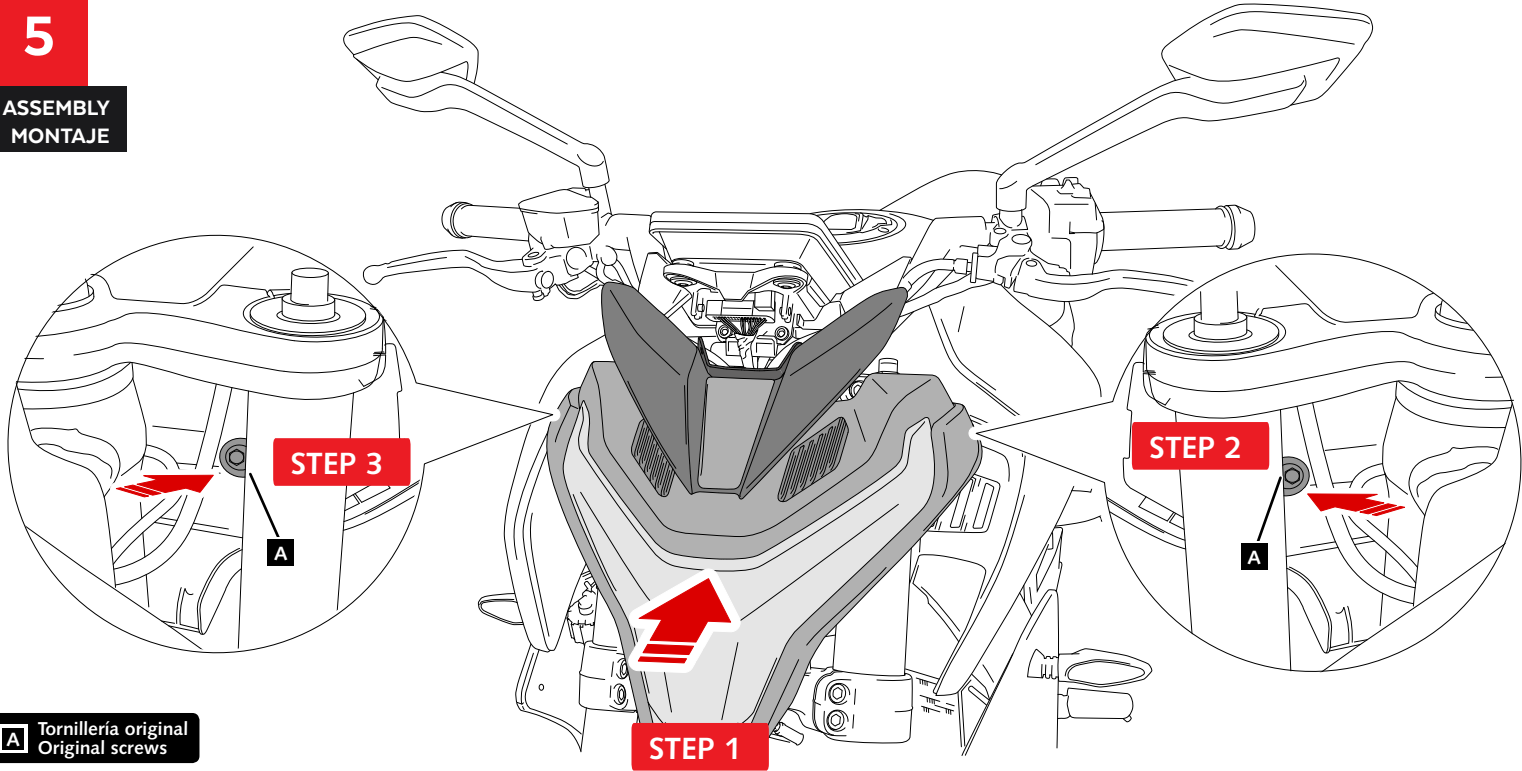

6

ASSEMBLY
MONTAJE

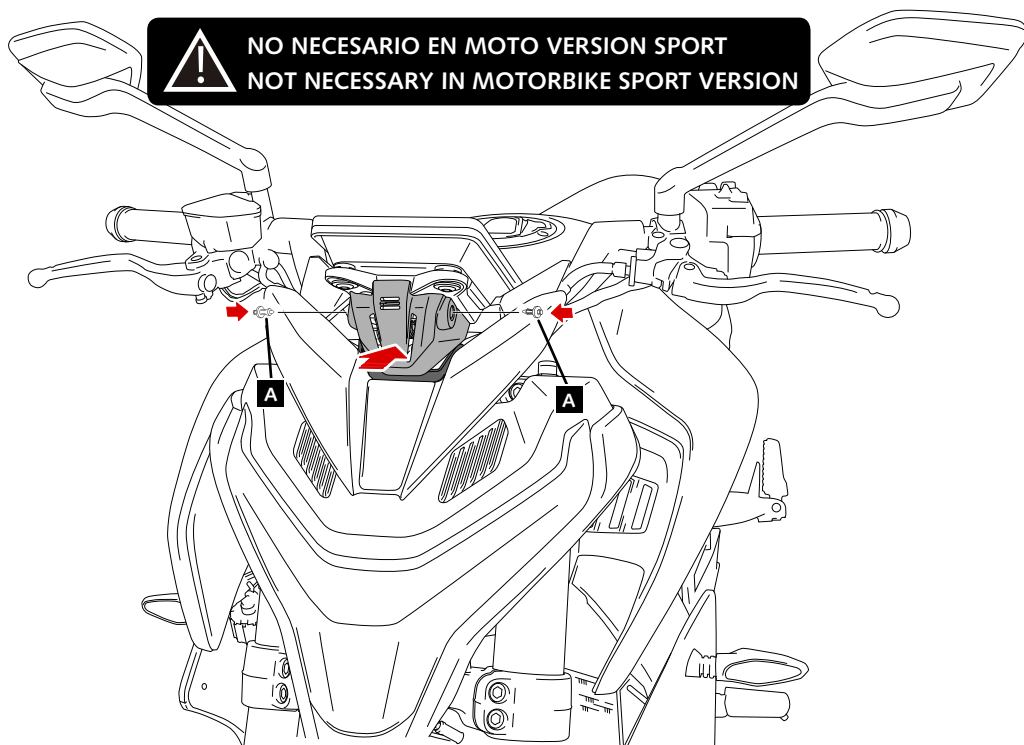


CFMOTO 800NK SPORT / 800NK ADVANCED '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

7

ASSEMBLY
MONTAJE

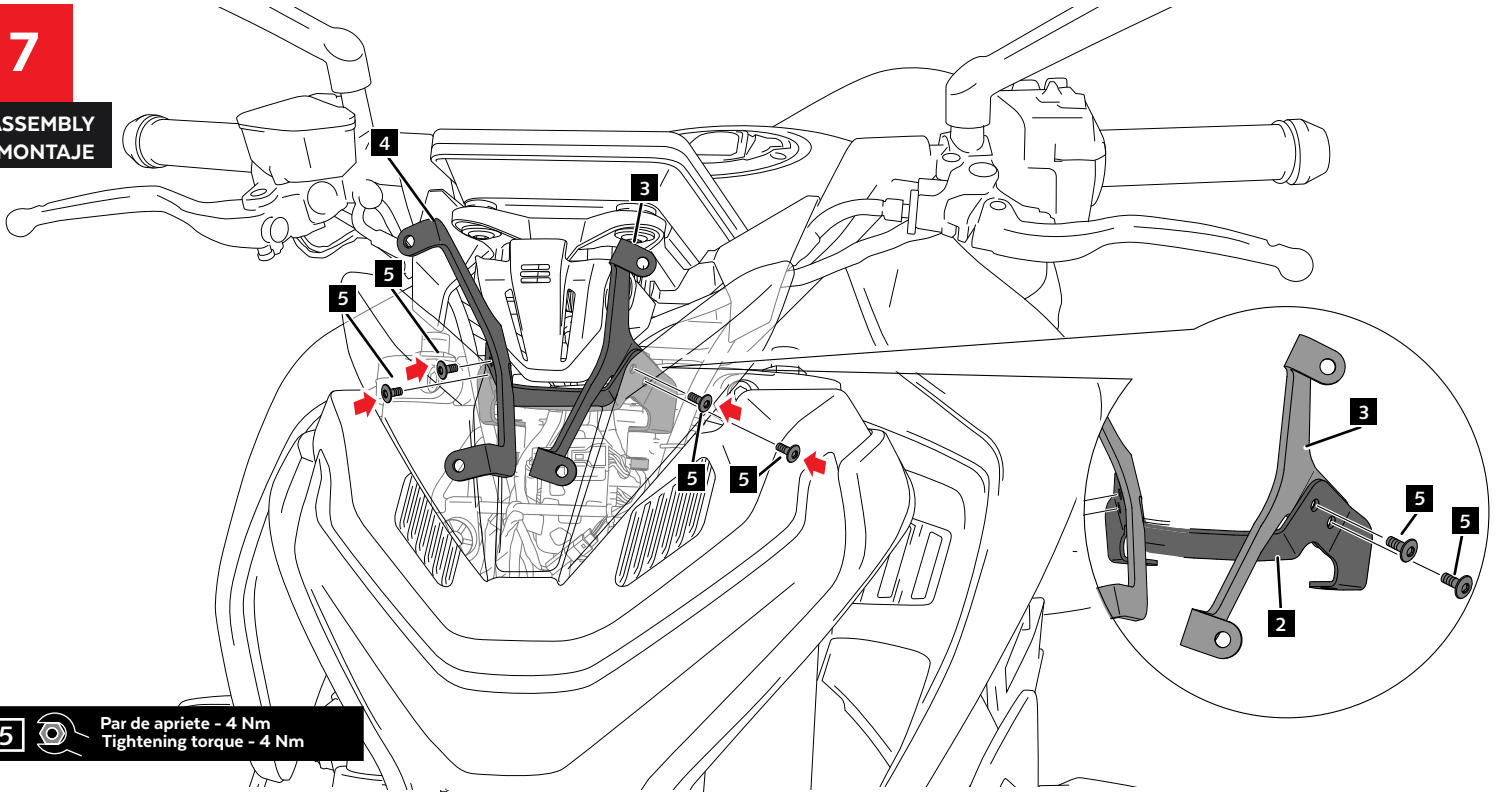


5

Par de apriete - 4 Nm
Tightening torque - 4 Nm

8

ASSEMBLY
MONTAJE

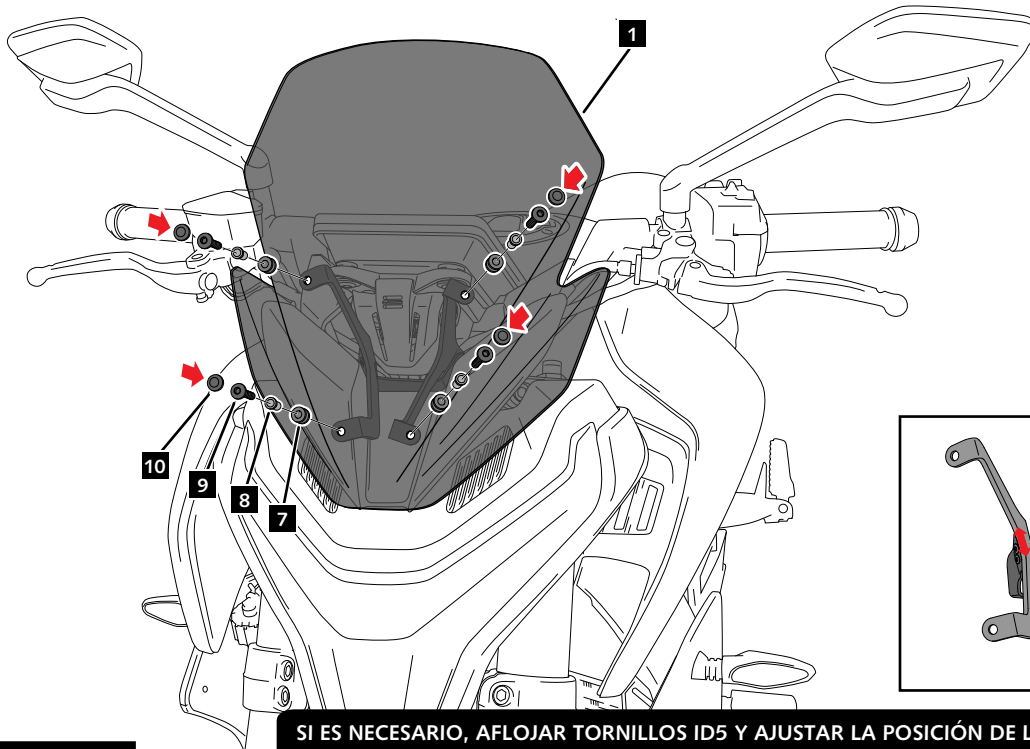

10

Par de apriete - 3.5 Nm
Tightening torque - 3.5 Nm

SI ES NECESARIO, AFLOJAR TORNILLOS ID5 Y AJUSTAR LA POSICIÓN DE LOS SOPORTES ID3 Y ID4
IF IT'S NECESSARY, LOOSEN ID5 SCREWS AND ADJUST THE POSITION OF ID3 AND ID4 SUPPORTS