


HONDA CB500 HORNET '24-

M O U N T I N G I N S T R U C T I O N S

REF 21934

WINDSHIELD NG SPORT / CARENABRÍS NG SPORT

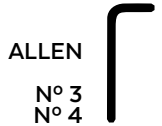


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula sport	Sport screen	1	21934W/H/F/J/ C/RM3
2		Soporte central	Support	1	SOPORIP2-C21934
3		Casquillo Ø13x Ø8 x 6mm	Ø13x Ø8 x 6mm arrowhead	2	CASQUI-----776
4		Tornillo M6x20 Ø14 ISO 7380	M6x20 Ø14 ISO 7380 Allen screw	2	TORNI-I7380-404
5		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	3	AROPASACABLES-1
6		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	3	CASQUI-1A---750
7		Tornillo Allen M5x12 Ø11 ISO 7380	M5x12 Ø11 ISO 7380 Allen screw	3	TORNI-AI---520
8		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	3	TAPON-----85

HONDA CB500 HORNET '24-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1


**DISASSEMBLY
DESMONTAJE**

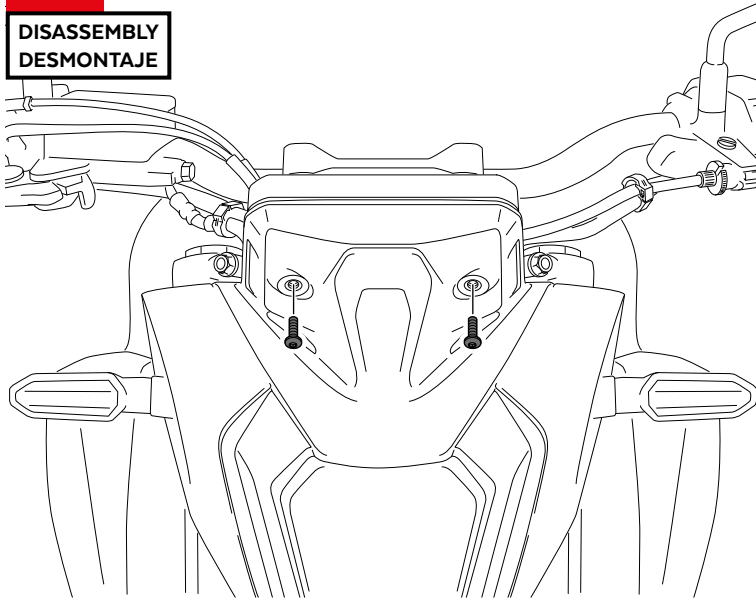

2


**ASSEMBLY
MONTAJE**

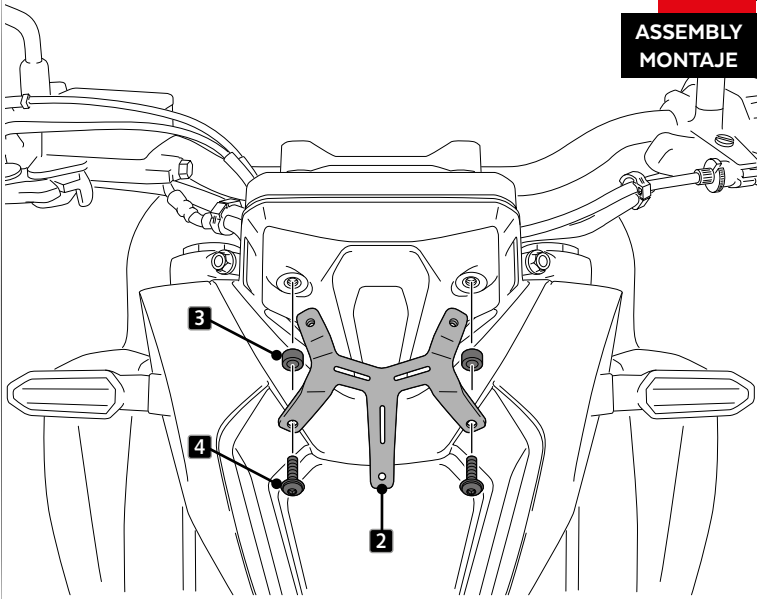


4  Par de apriete - 5 Nm
Tightening torque - 5Nm

3

**ASSEMBLY
MONTAJE**

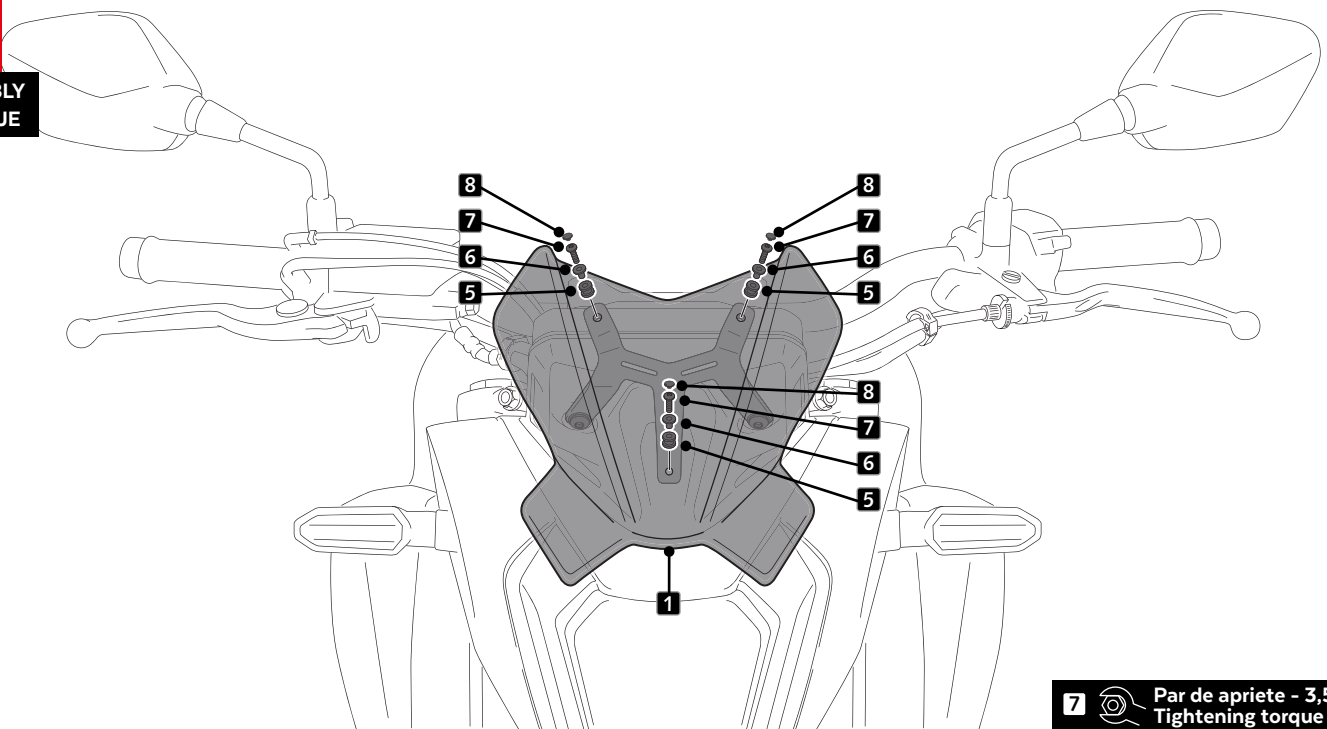

7  Par de apriete - 3,5 Nm
Tightening torque - 3,5Nm