

HONDA CBR600RR '13-

M O U N T I N G I N S T R U C T I O N S

REF 22743

REAR SEAT COWL



1 Person





15 min



EASY



ALLEN 
Nº 3
Nº 4
Nº 5


ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Colín	Rear seat cowl	1	22743J/N/CM3
2		Soporte delantero	Front support	1	SOPOR2P2-D22743
3		Soporte trasero	Rear support	1	SOPOR2P2-T22743
4		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	2	TORNI-I7380-730
5		Casquillo Ø8,5x Ø13x 3,5	Ø8,5x Ø13x 3,5 Arrowhead	2	CASQUI-----775
6		Tornillo Allen M6x25 Ø14 ISO 7380	M6x25 Ø14 ISO 7380 Allen screw	2	TORNI-I7380-405
7		Casquillo Ø8,5x Ø14x 10	Ø8,5x Ø14x 10 Arrowhead	2	CASQUI-----576
8		Arandela de goma Ø4,5 x Ø11 x 2mm	Ø4,5 x Ø11 x 2mm Rubber washer	4	ARAND-EPDM--722
9		Tornillo Allen M5x12 DIN7991	M5x12 DIN7991 Allen screw	4	TORNI-D7991-611
10		Tapón tornillo M5 DIN7991	M5 DIN7991 Screw cap	4	TAPON-----92
11		Arandela de Nylon M8 (negra)	M8 Nylon washer	4	ARAND-----799
12		Espuma	Foam	1	ESPUMA----22743

HONDA CBR600RR '13-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

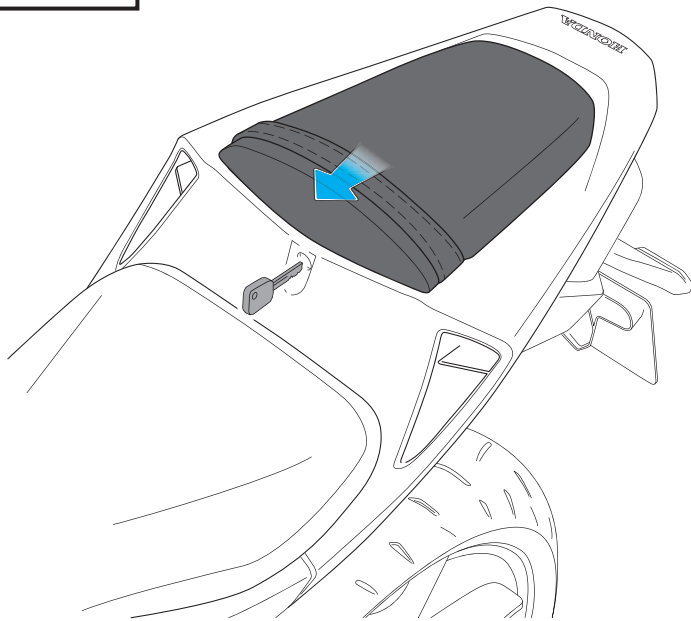


2

DISASSEMBLY
DESMONTAJE

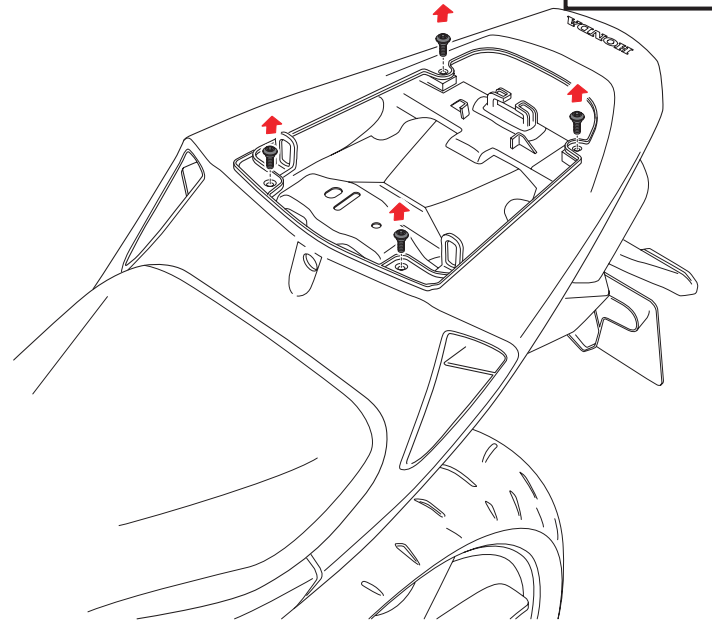

3

ASSEMBLY
MONTAJE

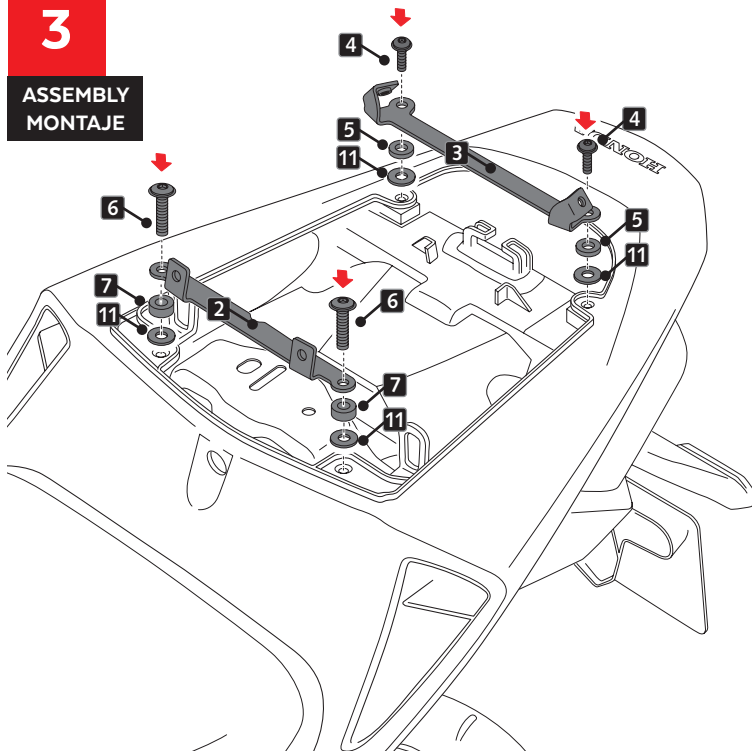

4

ASSEMBLY
MONTAJE

