

# KAWASAKI Z400 '19-

## M O U N T I N G I N S T R U C T I O N S

REF 3548

WINDSHIELD NAKED NEW GENERATON SPORT



1 Person



20 min












EASY

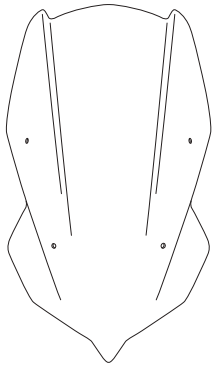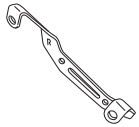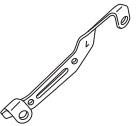

ALLEN

Nº 3  
Nº 4




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula sport	Sport screen	1	3548C /F/H/N/R/V/WM3
2		Soporte metálico derecho	Right metal support	1	SOPOR2P3-R-3548
3		Soporte metálico izquierdo	Left metal support	1	SOPOR2P3-L-3548
4		Tornillo Allen M5x20 Ø11 ISO 7380	M5x20 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-730
5		Casquillo Ø13x Ø8,5 x3,5	Ø13x Ø8,5 x3,5 arrowhead	4	CASQUI-----775
6		Silentblock M5	M5 silentblock	4	SILENBTM5-046/1
7		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	4	TORNI-I7380-493
8		Arandela de nylon M5x1	M5x1 Nylon washer	4	ARNV00000000245
9		Tapón tornillo M5 ISO 7380	M5 ISO 7380 Screw cap	4	TAPON-----85

# KAWASAKI Z400 '19-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

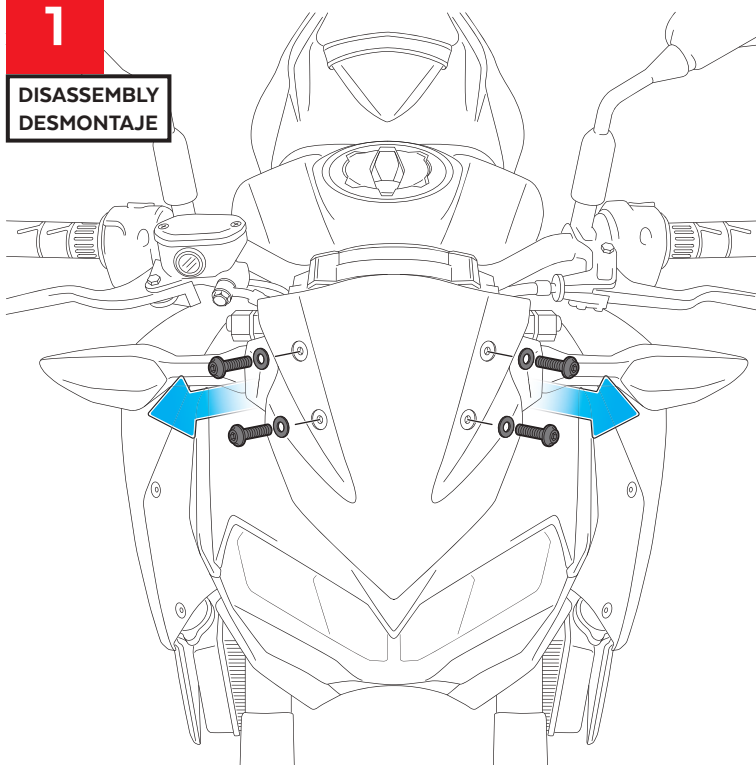

**2**

ASSEMBLY  
MONTAJE

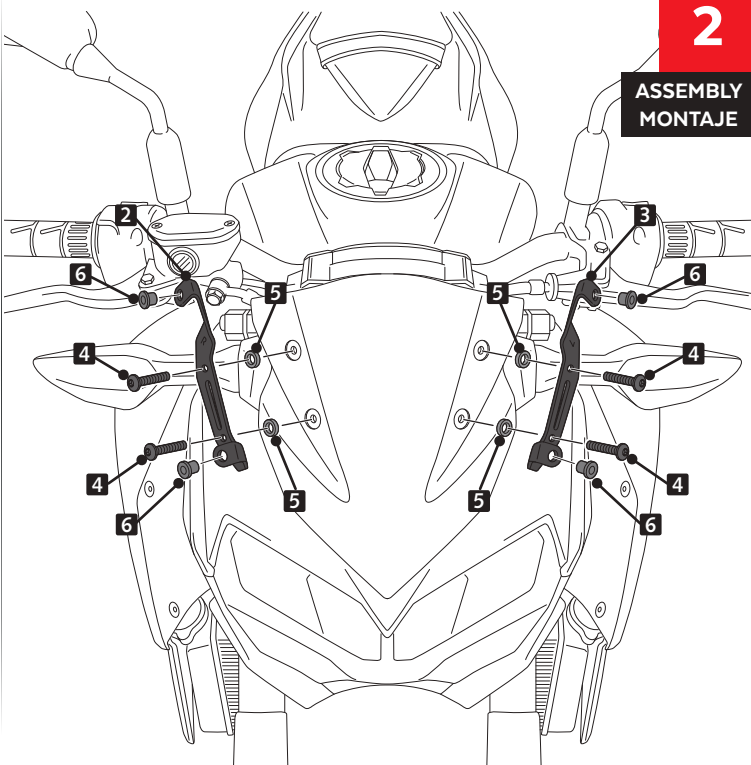

**3**

ASSEMBLY  
MONTAJE

