

# HARLEY DAVIDSON SPORTSTER 883/1200

## M O U N T I N G I N S T R U C T I O N S

REF 3688

FRONT FENDER



1 Person



20 min



EASY









Nº 8  
Nº 13



ALLEN

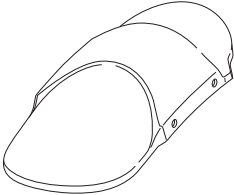Nº 3  
Nº 5




ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Guardabarros delantero	Front Fender	1	SOPOREMBIP13735
2		Soporte metálico derecho	Right metal suport	1	SOPOR2P2-L-3688
3		Soporte metálico izquierdo	Left metal suport	1	SOPOR2P2-R-3688
4		Tuerca autoblocante M5	M5 Lock Nut	4	TUERCA-D985-535
5		Tornillo Allen M5x11 Ø11 ISO 7380	M5x11 Ø11 ISO 7380 Allen screw	4	TORNI-AI----520
6		Tapón tornillo Allen M5 ISO 7380	M5 ISO 7380 Allen screw cap	4	TAPON-----85

# HARLEY DAVIDSON SPORTSTER 883/1200

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

DISASSEMBLY  
DESMONTAJE

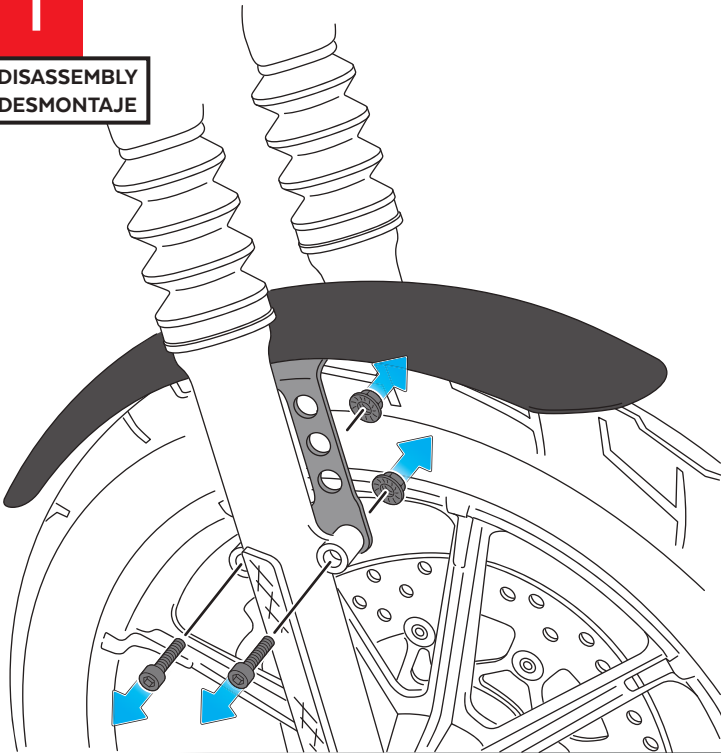


**2**

DISASSEMBLY  
DESMONTAJE

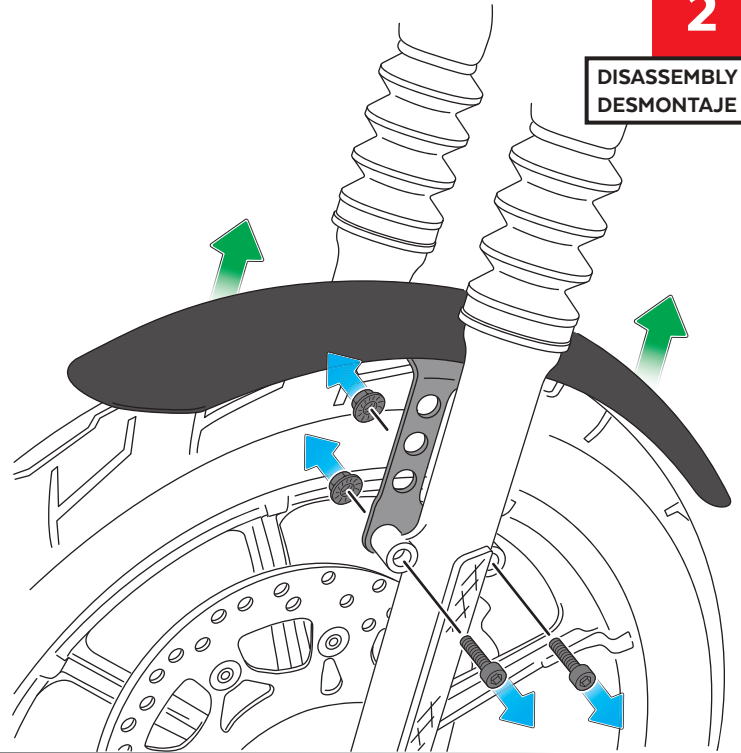

**3**


ASSEMBLY  
MONTAJE

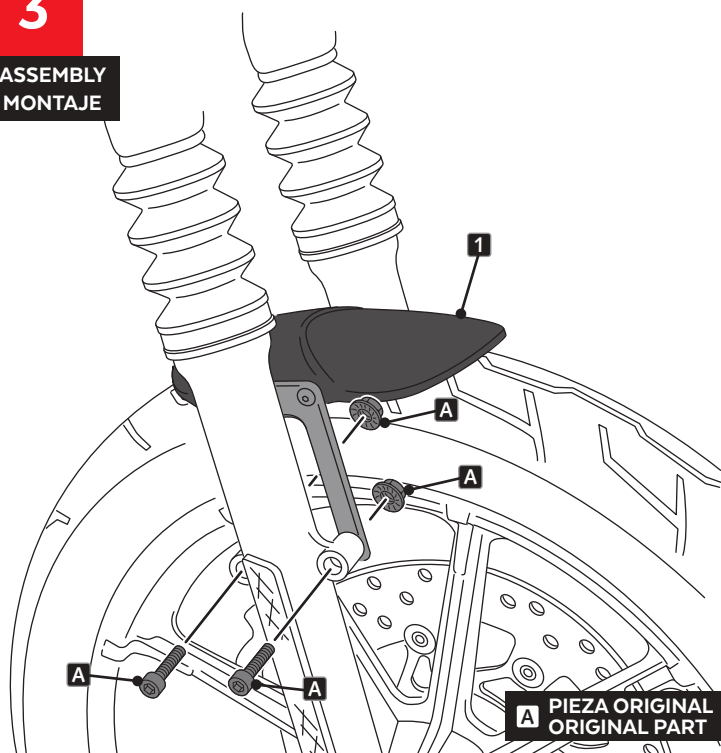

**A** PIEZA ORIGINAL  
ORIGINAL PART

**4**

ASSEMBLY  
MONTAJE

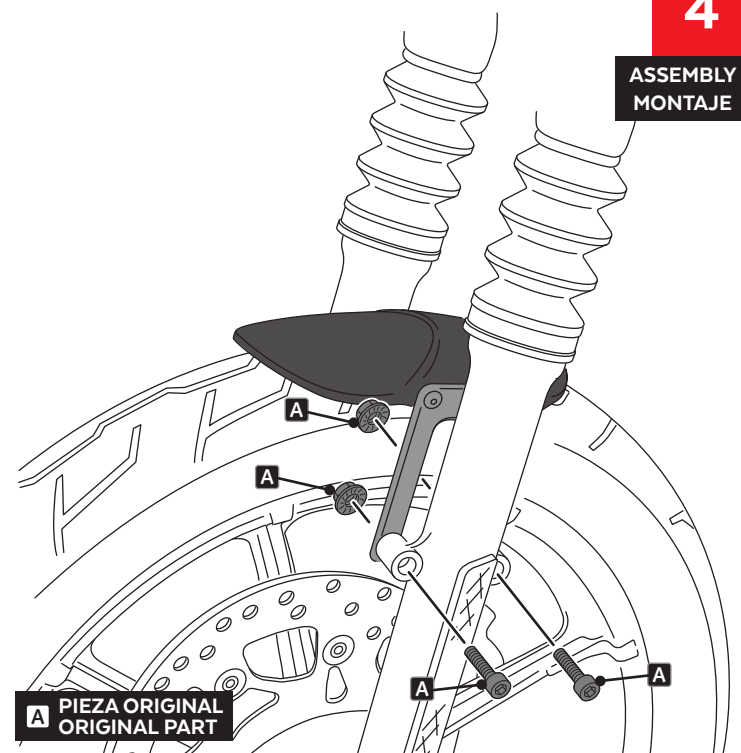

**A** PIEZA ORIGINAL  
ORIGINAL PART

# HARLEY DAVIDSON SPORTSTER 883/1200

## EXPLOTING

